


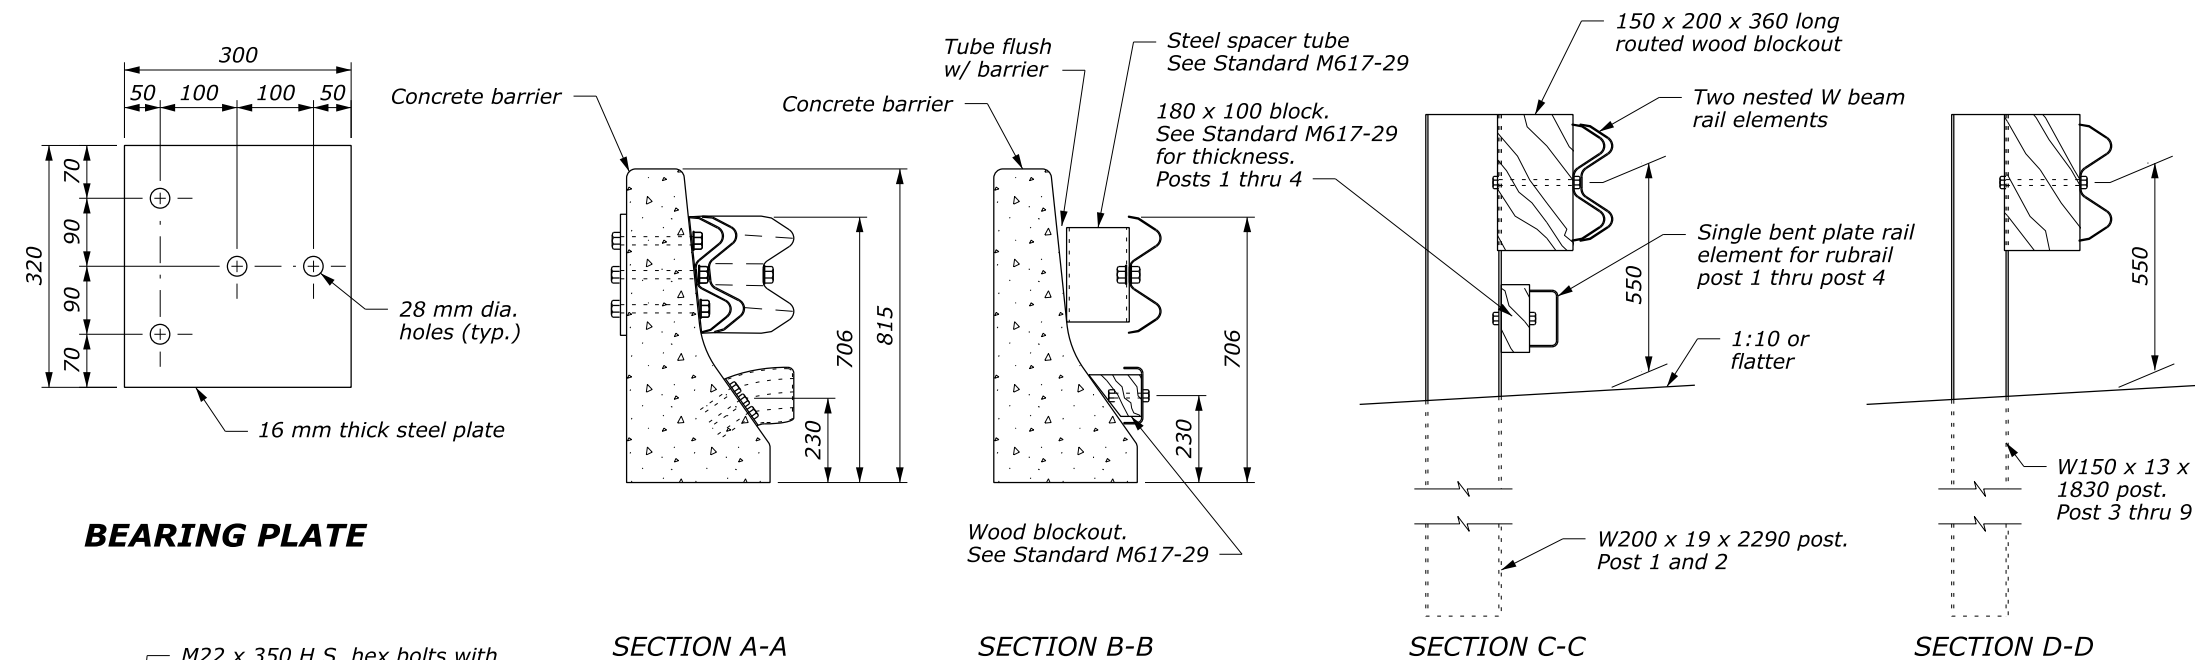

- NOTE:**
- Posts 1 through 5 require an additional hole to attach lower wood blocks and/or rubrail.
 - Offset drill wood blocks for rubrail to sit squarely on the post flange on posts 1 through 4. Secure blocks to posts 2 and 4. Secure rubrail and blocks to post flange on posts 1, 3, and 5 using M16 carriage bolts.
 - Do not bolt W beam to posts and blocks at posts 2 and 4.
 - Reinforced concrete wall or bridge parapet must be capable of developing a 265 kN pull out strength.
 - Furnish hardware in the metric sizes shown. Equivalent U.S. Customary sizes may be used when metric sizes are unavailable.
 - Dimensions without units are millimeters.

