#### **FINAL REPORT**

# **Techniques for Reviewing TNM Model Runs and Associated Noise Modeling Reports**

6.1.2018





# U.S. Department of Transportation

# Federal Highway Administration

#### Notice

This document is disseminated under the sponsorship of the U.S. Department of Transportation (USDOT) in the interest of information exchange. The U.S. Government assumes no liability for the use of the information contained in this document.

The U.S. Government does not endorse products or manufacturers. Trademarks or manufacturers' names appear in this report only because they are considered essential to the objective of the document.

#### **Quality Assurance Statement**

The Federal Highway Administration (FHWA) provides high-quality information to serve Government, industry, and the public in a manner that promotes public understanding. Standards and policies are used to ensure and maximize the quality, objectivity, utility, and integrity of its information. FHWA periodically reviews quality issues and adjusts its programs and processes to ensure continuous quality improvement.

Cover image source: FHWA Traffic Noise Model (TNM) 3.0

# **Table of Contents**

1.0	What Every Reviewer Should Know	1
	1.1 Legislation, Regulations and Policies	1
	1.1.1 The National Environmental Policy Act (NEPA)	1
	1.1.2 1970 Federal-Aid Highway Act	1
	1.1.3 FHWA Noise Regulation (23 CFR 772)	1
	1.1.4 State Highway Agency (SHA) Noise Policies	2
	1.1.5 FHWA Guidance	2
	1.2 Noise Study Requirements	3
	1.3 Traffic Noise Terminology	3
	1.4 Criteria for Determining Impacts	5
	1.5 How to Use this Guide	5
2.0	Reviewing TNM Objects Scenarios and TNM Reports	1
	2.1 Introduction	1
	2.2 Project Settings	2
	2.3 Project Layout	3
	2.4 Project Views	4
	2.5 Receivers	5
	2.6 Roadways	9
	2.7 Building Rows	15
	2.8 Terrain Lines	18
	2.9 Ground Zones	21
	2.10 Tree Zones	23
	2.11 Barriers	26
3.0	Review of Specific Projects in TNM 3.0	34
	3.1 Roundabout	34
	3.2 Unsignalized Intersections	38
	3.3 Signalized Intersections	41
4.0	Identifying Challenges in TNM Analysis	45
5.0	References	46
6.0	Appendix: TMN 3.0 Noise Modeling Review Checklist	47

## List of Figures

Figure 1-1: Common Sound Levels	4
Figure 2-1: TNM 3.0 Initial Screen	1
Figure 2-2: TNM 3.0 Project Setting	2
Figure 2-3: Project Information	2
Figure 2-4: TNM 3.0 Layout	3
Figure 2-5: Section View	4
Figure 2-6: 3D View	4
Figure 2-7: Measurement Tool (feet or meters)	
Figure 2-8: Receivers Plan View	
Figure 2-9: Receivers Report View	6
Figure 2-10: Receivers Input Data	7
Figure 2-11: Section View	
Figure 2-12: Measurement Tool (feet or meters)	8
Figure 2-13: Receivers "Levels/Criteria" Data	9
Figure 2-14: Roadway Plan View	
Figure 2-15: Roadway Report View	
Figure 2-16: Roadway Input Data	
Figure 2-17: Roadway Input Data (showing point names)	11
Figure 2-18: Roadway Segment Data	11
Figure 2-19: Roadway Segments	12
Figure 2-20: Roadway Traffic Volume and Speed	12
Figure 2-21: Traffic for TNM Vehicles Roadway Report View	13
Figure 2-22: Roadway Traffic Control Devices	13
Figure 2-23: Roadway on Structure	14
Figure 2-24: Multi-Lane Roadway Layout	14
Figure 2-25: Roadways 3D View	15
Figure 2-26: Building Rows Plan View	16
Figure 2-27: Building Rows Report View	16
Figure 2-28: Building Rows Input Data	17
Figure 2-29: Building Rows 3D View (representing residential homes)	17
Figure 2-30: Terrain Lines Plan View	19
Figure 2-31: Terrain Lines Report View	19
Figure 2-32: Terrain Lines Input Data	20
Figure 2-33: Terrain Lines Section View	21
Figure 2-34: TNM Ground Types	21
Figure 2-35: Ground Zones Plan View	22
Figure 2-36: Ground Zones Report View	22
Figure 2-37: Ground Zones Input	23
Figure 2-38: Tree Zones Plan View	24
Figure 2-39: Tree Zones Report View	24
Figure 2-40: Roadway Visibility through a Tree Zone (NCHRP 791)	25

Figure 2-41: Tree Zones Height and EFR	25
Figure 2-42: Tree Zones Input Data	26
Figure 2-43: Barriers Plan View Layout	27
Figure 2-44: Barriers Report View	27
Figure 2-45: 3D View of Barriers Segment Perturbation	28
Figure 2-46: Barriers Segment Perturbation Input	28
Figure 2-47: Large Buildings Modeled as Barriers	29
Figure 2-48: Large Buildings Input Data	29
Figure 2-49: Jersey Barriers Input Data	30
Figure 2-50: Barriers Segments on Structure	30
Figure 2-51: Barrier Reflection Plan View	31
Figure 2-52: Barriers Noise Reflection Coefficient (NRC)	31
Figure 2-53: Parallel Reflection Plan View	32
Figure 2-54: Parallel Barriers Noise Reflection Coefficient (NRC)(NRC)	32
Figure 2-55: Parallel Barrier Analysis Results	33
Figure 2-56: Barriers 3D View	33
Figure 3-1: ZOIs for a Deceleration Roadway (NCHRP Report 311)	35
Figure 3-2: Plan View of Roundabout Modeling	35
Figure 3-3: Traffic Volume and Speeds of Approach Leg	36
Figure 3-4: Flow Control of Approach Leg	36
Figure 3-5: Traffic Volume and Speeds of Departure Leg	37
Figure 3-6: Flow Control of Departure Leg	37
Figure 3-7: Plan View of Unsignalized Intersection Modeling	39
Figure 3-8: Main Roadway Traffic Volume and Speeds of Approach LegLeg	40
Figure 3-9: Main Roadway Flow Control of Departure LegLeg	40
Figure 3-10: Local Roadway Traffic Volume and Speeds of Approach Leg	41
Figure 3-11: Local Roadway Flow Control of Departure Leg	41
Figure 3-12: Plan View of Signalized Intersection Modeling	42
Figure 3-13: Main Roadway Traffic Volume and Speeds of Approach Leg	43
Figure 3-14: Main Roadway Flow Control of Departure Leg	43
Figure 3-15: Local Roadway Traffic Volume and Speeds of Approach Leg	44
Figure 3-16: Local Roadway Flow Control of Departure Leg	44
List of Tables	
Table 1-1: Noise Abatement Criteria [Hourly A-weighted Sound Level, decibels (dBA)]	
Table 4-1: Summary of Common TNM Modeling Issues	45

## **List of Abbreviations**

CEQ Council on Environmental Quality
DGAC Dense-graded asphalt concrete
FAQ Frequently asked questions
GIS Geographic information systems

GUI Graphical user interface

IL Insertion loss

NAC Noise Abatement Criteria

NCHRP National Cooperative Highway Research Program

NEPA National Environmental Policy Act
NRC Noise Reflection Coefficient
OGAC Open-graded asphalt concrete
PCC Portland cement concrete

REMEL Reference Energy Mean Emission Levels

SHA State highway agency
TNM Traffic Noise Model

**Technical Report Documentation Page** 

1. Report No.	2. Government Accession No.	3. Recipient's Catalog No.			
FHWA-XXX	(Remove; Insert Information Here or leave blank)	(Remove; Insert Information Here or leave blank)			
4. Title and Subtitle		5. Report Date			
<b>Techniques for Reviewin</b>	g TNM Model Runs and Associated Noise	December 15, 2017			
Modeling Reports		6. Performing Organization Code			
7. Author(s)		8. Performing Organization Report No.			
RSG					
9. Performing Organization Na	nme And Address	10. Work Unit No. (TRAIS)			
RSG 55 Railroad Row		(Remove; Insert Information Here or leave blank)			
White River Junction		11. Contract or Grant No.			
VT 05001		(Remove; Insert Information Here or leave blank)			
12. Sponsoring Agency Name a	nd Address	13. Type of Report and Period Covered			
1200 New Jersey Ave. SE	U.S. Department of Transportation 1200 New Jersey Ave. SE				
Washington, D.C.		14. Sponsoring Agency Code			
		(Remove; Insert Information Here or leave blank)			

#### 15. Supplementary Notes

Other authors: Bowlby & Associates, Inc.; ATS Consulting; Environmental Acoustics; Illingworth & Rodkin

#### 16. Abstract

This guide provided a Tier 1 approach that provides basic details and checklists for reviewers performing accelerated reviews and includes information on how to review noise models developed using TNM 3.0 in Section 2. Section 3 of this guide provides a Tier 1 approach that provided in-depth advanced scenario details and checklists useful for detailed reviews of complex projects and reviews specific project scenarios using the National Cooperative Highway Research Program (NCHRP) Report 791, Supplemental Guidance on the Application of FHWA's Traffic Noise Model (TNM). It also identifies challenges in TNM 3.0 analysis (Section 4). Appendix A includes a checklist tool for review of noise models. The reviewer should also use the FHWA's review guide, Techniques for Reviewing Noise Analyses and Associated Noise Reports, to review the associated noise study report to ensure that the TNM modeling results are reported accurately.

17. Key Words  Noise modeling analyses; Highway traffic nois modeling results; TNM 3.0; checklist tool	e model; TNM	18. Distribution Statement (Remove; Insert Information Here or leave blank)					
19. Security Classif. (of this report) Unclassified	20. Security (Unclassified	Classif. (of this page)	21. No. of Pages 58	22. Price (Remove; Insert Information Here or leave blank)			

Form DOT F 1700.7 (8-72)

Reproduction of completed page authorized

## 1.0 What Every Reviewer Should Know

Every state highway agency (SHA) must develop a noise policy to comply with the requirements of the Federal Highway Administration (FHWA) noise regulation, *Procedures for Abatement of Highway Traffic and Construction Noise*, 23 CFR 772 [1]. SHAs must conduct noise studies for federal highway projects in accordance with the FHWA noise regulation and the SHA noise policy.

SHAs have flexibility in developing their noise policies and documenting the results of the noise studies. This guide provides technical guidance and is a tool for SHA practitioners to support and promote comprehensive and efficient reviews of highway traffic noise studies. This guide provides guidance for reviewing noise models developed with FHWA's Traffic Noise Model (TNM) version 3.0 (TNM 3.0). Some SHAs already provide guidance for TNM models review. This guide serves as a supplemental resource but is not intended to replace SHA guidance.

## 1.1 Legislation, Regulations and Policies

#### 1.1.1 The National Environmental Policy Act (NEPA)

The National Environmental Policy Act of 1969 (NEPA) established a national policy on the environment and created the Council on Environmental Quality (CEQ). The purpose of NEPA is to minimize or eliminate damage to the environment caused by actions funded or taken by the federal government. NEPA provides broad authority and responsibility for evaluating and mitigating adverse environmental effects including those resulting from highway traffic noise.

### 1.1.2 1970 Federal-Aid Highway Act

The Federal Aid Highway Act of 1970 (FAHA 1970) mandated that FHWA develop noise standards for identifying noise impacts and evaluating noise mitigation for federal projects. FAHA 1970 also stipulated that FHWA cannot approve plans and specifications for federal projects unless the project includes adequate noise abatement measures to comply with the standards.

## 1.1.3 FHWA Noise Regulation (23 CFR 772)

FHWA developed noise regulations or standards in response to the requirements set forth in FAHA 1970. The purposes of the FHWA noise regulation are to:

- Provide procedures for noise studies and noise abatement measures to help protect public health, welfare and livability;
- Supply noise abatement criteria (NAC); and

THIS IS THE FIRST PROJECT

IN THE UNITED STATES
ON WHICH ACTUAL CONSTRUCTION WAS STARTED
UNDER PROVISIONS OF THE NEW
FEDERAL AID HIGHWAY ACT OF 1956

Source: "Three States Claim First Interstate Highway", by Richard F. Weingroff, FHWA, Public Roads, Vol. 60, No. 1, Summer 1996

• Establish requirements for information to be given to local officials for use in the planning and design of highways.

FHWA has updated the regulations as summarized below:

- 1973 Policy and Procedures Memorandum (PPM) 90-2.
- 1976 Federal-Aid Highway Procedures Manual, Volume 7, Chapter 7, Section 3 (FHPM 7-7-3).
- 1982 Procedures for Abatement of Highway Traffic Noise and Construction Noise, 23 CFR 772.
- 1997 Procedures for Abatement of Highway Traffic Noise and Construction Noise, 23 CFR 772: Revised eligibility for Type II projects.
- 2005 Procedures for Abatement of Highway Traffic Noise and Construction Noise, 23 CFR 772: Revised to require FHWA's Traffic Noise Model (FHWA TNM) for highway traffic noise analyses.
- July 13, 2010 Procedures for Abatement of Highway Traffic Noise and Construction Noise, 23 CFR 772: Revised to add definitions and to clarify the applicability of the regulation, certain analysis requirements, and the use of Federal funds for noise abatement measures. [1]

Each update supersedes and replaces the previous one.

#### 1.1.4 State Highway Agency (SHA) Noise Policies

On June 12, 1995, FHWA issued a memorandum requiring states to adopt written statewide noise policies. These written state policies must be approved by FHWA and demonstrate "substantial compliance" with the FHWA noise regulation. On July 13, 2010, FHWA

amended 23 CFR 772 that required states to develop noise policies consistent with the regulation and that are applied uniformly and consistently statewide. SHAs have flexibility in developing their noise policies and documenting the results of noise studies.


#### 1.1.5 FHWA Guidance

FHWA concurrently published the document, *Highway Traffic Noise Analysis and Abatement: Policy and Guidance* (FHWA's guidance), to aid states in developing their policies. FHWA updated this guidance most recently in December 2011 [2] to ensure consistency with the July 13, 2010 FHWA noise regulation.

FHWA has developed answers to many Frequently Asked Questions (FAQs) and also developed a series of "Highway Traffic Noise Resources" to assist SHAs in implementing the FHWA noise regulation.

# DEPARTMENT OF TRANSPORTATION Federal Highway Administration 23 CFR Part 772 [FHWA Docket No. FHWA-2008-0114] RIN 2125-AF26 Procedures for Abatement of Highway Traffic Noise and Construction Noise AGENCY: Federal Highway Administration (FHWA), DOT.

ACTION: Final rule.

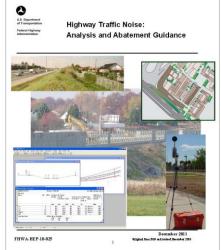

#### 1.2 Noise Study Requirements


The FHWA noise regulation requires noise studies for Type I projects including roadway widenings to provide additional through travel lanes, the construction of a highway on new location, the physical alteration of an existing highway that significantly changes either the horizontal or vertical alignment or increases capacity. Projects that involve the addition of a new or substantial alteration of a weigh station, rest stop, ride-share lot or toll plaza are also Type I Projects.

The SHA must conduct detailed noise analyses for Type I projects as well as for Type II projects, which involve the construction of noise barriers when there is no associated highway project. Projects that are not Type I or Type II are Type III. Type III projects include projects that typically do not add capacity and are not expected to cause noise impacts including maintenance, roadway safety, bridge repair, intersection improvement, and bicycle and pedestrian projects. Noise analyses are not required for Type III projects regardless of the type of environmental document.

## 1.3 Traffic Noise Terminology

Highway traffic noise levels are expressed in terms of the hourly, A-weighted equivalent sound level in decibels (dBA). A sound level represents the level of the rapid air pressure fluctuations caused by sources, such as traffic, that are heard as noise. A decibel is a unit that relates the sound pressure of a noise to the faintest sound the young human ear can hear. The A--weighting refers to the amplification or attenuation of the different frequencies of the sound (subjectively, the pitch) to correspond to the way the human ear "hears" these frequencies. Generally, when the sound level exceeds the mid-60 dBA range, outdoor conversation in normal tones at a distance of three feet (0.9 meters) becomes difficult. A 9-10 dB increase in sound level is typically judged to be twice as loud as the original sound, while a 9-10 dB reduction is half as loud. Doubling the number of sources (i.e., vehicles) increases the hourly equivalent sound level (Leq) by approximately 3 dB, which is usually the smallest change that people can detect without specifically listening for the change. Figure 1-1 shows some common indoor and outdoor sound levels.

Figure 1-1: Common Sound Levels

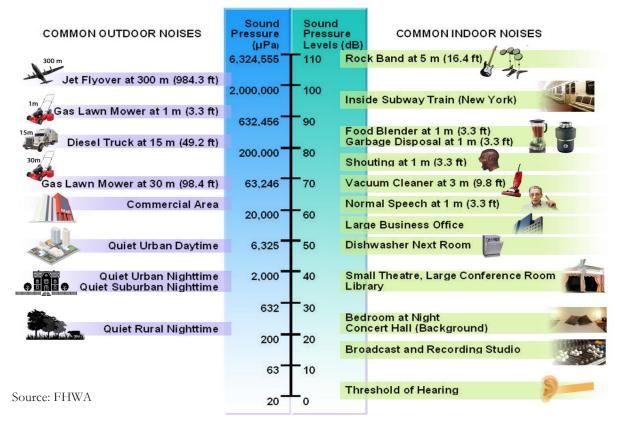

Because most environmental noise fluctuates from moment to moment, it is standard practice to condense data into a single level called the equivalent sound level ( $L_{eq}$ ). The  $L_{eq}$  is a steady sound level that would contain the same amount of sound energy as the actual time-varying sound evaluated over the same time period. The  $L_{eq}$  averages the louder and quieter moments, but gives much more weight to the louder moments in the averaging. For traffic noise studies,  $L_{eq}$  is typically evaluated over the worst one-hour period and is defined as  $L_{eq}$  (1h).

The term insertion loss (IL) is generally used to describe the reduction in  $L_{eq}$  (1h) at a location after a noise barrier is constructed. For example, if the  $L_{eq}$  (1h) at a residence before a barrier is constructed is 75 dBA and the  $L_{eq}$  (1h) after a barrier constructed is 65 dBA, then the insertion loss would be 10 dB.

Noise studies may use the terms "receptor" and "receiver" that are similar but distinct. Receptors represent noise-sensitive locations, such as a backyard or an outdoor seating area at a restaurant. Receivers are discreet TNM modeling points that represent receptors. A TNM receiver can represent a single receptor or a group of receptors, such as using one TNM receiver to represent a group of residences with similar sound levels.

## 1.4 Criteria for Determining Impacts

Noise impact is determined by comparing predicted future noise levels with the project: (1) to a set of Noise Abatement Criteria (NAC) for a land use activity category, and (2) to existing noise levels.

The FHWA noise regulation states that traffic noise impacts require consideration of abatement when worst-hour noise levels approach or exceed the NAC listed in

Activity Category	L <sub>Aeq</sub> (h)	Evaluation Location	Activity Description
А	57	Exterior	Lands on which serenity and quiet are of extraordinary significance and serve an important public need and where the preservation of those qualities is essential if the area is to continue to serve its intended purpose.
B <sup>()</sup>	67	Exterior	Residential.
C <sup>(1)</sup>	67	Exterior	Active sport areas, amphitheaters, auditoriums, campgrounds, cemeteries, day care centers, hospitals, libraries, medical facilities, parks, picnic areas, places of worship, playgrounds, public meeting rooms, public or nonprofit institutional structure, radio stations, recording studios, recreation areas, Section 4(f) sites, schools, television studios, trails, and trail crossings.
D	52	Interior	Auditoriums, day care centers, hospitals, libraries, medical facilities, places of worship, public meeting rooms, public or nonprofit institutional structure, radio studios, recording studios, schools, and television studios.
E <sup>(1)</sup>	72	Exterior	Hotels, motels, offices, restaurants/bars, and other developed lands, properties or activities not included in A-D, or F.
F			Agriculture, airports, bus yards, emergency services, industrial, logging, maintenance facilities, manufacturing, mining, rail yards, retail facilities, shipyards, utilities (water resources, water treatment, electrical), and warehousing.
G			Undeveloped lands that are not permitted.

or substantially increase existing noise levels. FHWA requires that each SHA define "approach" and "substantial increase." Most SHAs define approach as one dB below the NAC. FHWA permits SHAs to define "substantial increase" between 5 and 15 dB.

The FHWA established the NAC based on interference of speech communication. The NAC are a compromise between noise levels that are desirable and those that are achievable and are not design goals. SHAs should focus noise abatement efforts on achieving the noise reduction design goal; not reducing noise levels below the NAC.

#### 1.5 How to Use this Guide

Section 2 of this guide provided a Tier 1 approach that provides basic details and checklists for reviewers performing accelerated reviews and includes information on how to review noise models developed using TNM 3.0. Section 3 of this guide provides a Tier 1 approach that provided in-depth advanced scenario details and checklists useful for detailed reviews of complex projects and reviews specific project scenarios using the National Cooperative Highway Research Program (NCHRP) Report 791, Supplemental Guidance on the Application of FHWA's Traffic Noise Model (TNM). Section 4 identifies challenges in TNM 3.0 analysis (Section 4). Appendix A includes a checklist tool for review of noise models.

TNM 3.0 differs from its predecessor, TNM 2.5, in the way it names models. TNM 2.5 used the term "run" to define a specific model while TNM 3.0 uses the term "project". Therefore, all references in this guide to "project" are for the TNM model and not the Type I project for which the noise study is being conducted.

Sections 2 and 3 are in a statement and response format. The reviewer can move through each section of a guide to evaluate the completeness and accuracy of a submitted noise model. The reviewer can use the associated TNM 3.0 noise modeling review checklist in Appendix A to determine if it provides all required information. A reviewer can complete a checklist for each report noting items that are complete and add notes on items that are missing, incorrect, or need attention.

The blue boxes in the right margin throughout the guide provide additional review tips, many of which reference the FHWA Frequently Asked Questions (FAQs) available on FHWA's Noise Program website.

The TNM 3.0 review questions tie directly to the review checklist in Appendix A. The reviewer can complete a checklist for each noise model noting items that are modeled correctly and adding notes on items that are missing, incorrect or need attention.

The reviewer should also use the FHWA's review guide, *Techniques for Reviewing Noise Analyses and Associated Noise Reports*, to review the associated noise study report to ensure that the TNM modeling results are reported accurately.

FHWA also updated the Noise Measurement Handbook and developed a Noise Measurement Field Guide. SHAs may opt to use these documents to supplement their noise

measurement procedures. All referenced FHWA documents are available on FHWA's Noise Program website.

Table 1-1: Noise Abatement Criteria [Hourly A-weighted Sound Level, decibels (dBA)]

Activity Category	L <sub>Aeq</sub> (h)	Evaluation Location	Activity Description
А	57	Exterior	Lands on which serenity and quiet are of extraordinary significance and serve an important public need and where the preservation of those qualities is essential if the area is to continue to serve its intended purpose.
B <sup>(1)</sup>	67	Exterior	Residential.
C <sup>(1)</sup>	67	Exterior	Active sport areas, amphitheaters, auditoriums, campgrounds, cemeteries, day care centers, hospitals, libraries, medical facilities, parks, picnic areas, places of worship, playgrounds, public meeting rooms, public or nonprofit institutional structure, radio stations, recording studios, recreation areas, Section 4(f) sites, schools, television studios, trails, and trail crossings.
D	52	Interior	Auditoriums, day care centers, hospitals, libraries, medical facilities, places of worship, public meeting rooms, public or nonprofit institutional structure, radio studios, recording studios, schools, and television studios.
E <sup>(1)</sup>	72	Exterior	Hotels, motels, offices, restaurants/bars, and other developed lands, properties or activities not included in A-D, or F.
F			Agriculture, airports, bus yards, emergency services, industrial, logging, maintenance facilities, manufacturing, mining, rail yards, retail facilities, shipyards, utilities (water resources, water treatment, electrical), and warehousing.
G			Undeveloped lands that are not permitted.

2

<sup>&</sup>lt;sup>1</sup> Includes undeveloped lands permitted for this activity category. Source: 23 CFR 772, July 2010.

# 2.0 Reviewing TNM Objects Scenarios and TNM Reports

#### 2.1 Introduction

FHWA updated the acoustical algorithms in TNM 3.0 to support more accurate noise analyses. TNM 3.0 uses a Graphical User Interface (GUI) that incorporates geographic information systems (GIS) capability. When complete, the TNM 3.0 will provide FHWA stakeholders with a modern noise analysis tool that interacts with common highway design software.

TNM 3.0 also has updated acoustical algorithms (including the ability to process reflections off of single barriers, as well as  $L_{10}/L_{50}$  capabilities), and interoperability via a TNM plug-in to Esri's ArcGIS®, AutoDesk's AutoCAD®, and Bentley's MicroStation®. These enhancements provide more flexibility and accuracy during data entry and better visual representations during data analysis for highway traffic noise studies.

Figure 2-1 shows the graphical user interface of the TNM 3.0. The new layout allows the user to select from a variety of base-maps as background for the model. The GUI layout is explained in detail in Section 2.2.

Tenners

Ten


Figure 2-1: TNM 3.0 Initial Screen

#### 2.2 Project Settings

#### Check completeness of basic setup information.

Check that the basic setup information includes the organization, the agency and contract number, the project units, the project projection, the TNM project name (i.e. Existing, Future No-Build and Build, etc.) and a brief project description including analyst name.

Figure 2-2: TNM 3.0 Project Setting

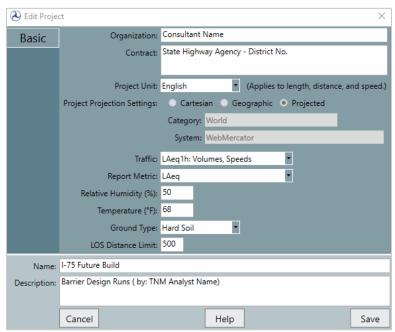

Project information can also be viewed by clicking the "Project Information" in the Object Details Pane.

Figure 2-3: Project Information

Project Information

Run Title: TNM3.0 Standalone Webinar Case
Number of Receivers: 13
Unit Of Measure: English
Organization:
Project Contract: FHWA TNM 3.0
Analysis By:
Status: New Case

Confirmation of project projection settings with TNM analyst is helpful to ensure consistent units in the evaluation process.


TNM 3.0 includes the ability to calculate the new metrics L<sub>10</sub> and L<sub>50</sub>, in addition to the existing metrics of L<sub>eq</sub> and L<sub>dn</sub>.

#### 2.3 Project Layout

The screenshots shown below and for the rest of the document are meant as an example and are not intended to recommend the project extents to model in actual projects. The TNM project layout shows the Legend Pane, the View Pane, the Edit Pane and the Object Details Pane (Figure 2-4).

- The Legend Pane displays the layers and TNM objects
- The View Pane displays the map and associated data using different visualization methods
- The Edit Pane contains the editing functions
- The Object Details Pane lists the data for the active TNM object
- The Properties Pane

Figure 2-4: TNM 3.0 Layout

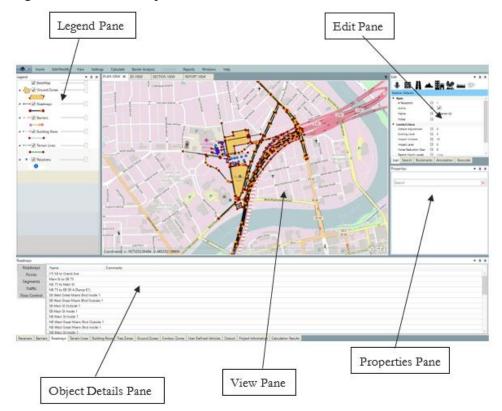

Legend Pane:
Objects layers can
be turned off by
unchecking the
object later to only
show the object
reviewed.

## 2.4 Project Views

Check the various project objects using several views, which will be elaborated on in the following sections, as well as a measuring tool that can be used to measures distances between the different objects. The TNM project views are:

- Section view
- 3D View
- Measurement Tool

Figure 2-5: Section View

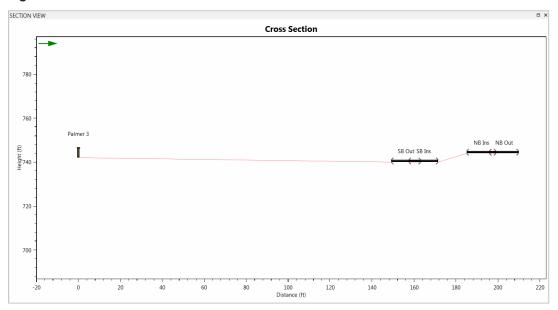


Figure 2-6: 3D View


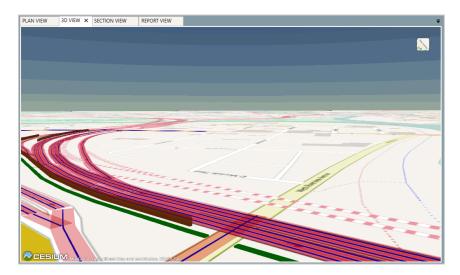


Figure 2-7: Measurement Tool (feet or meters)

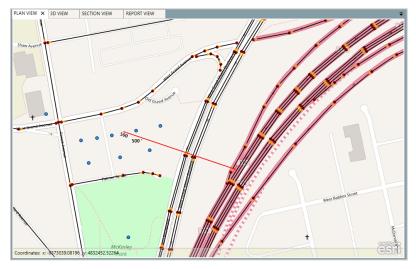

#### 2.5 Receivers

A Standard model calculates noise levels at area(s) of frequent human use with receivers placed in representative locations where frequent human use occurs. The reviewer can enable the receiver layer (Figure 2-8), review the plan view, and check receiver data in the Object Details Pane or receivers report (Figure 2-9). The reviewer can save and export the report to Excel, Word and PDF to check coordinates and other object details.

Figure 2-8: Receivers Plan View

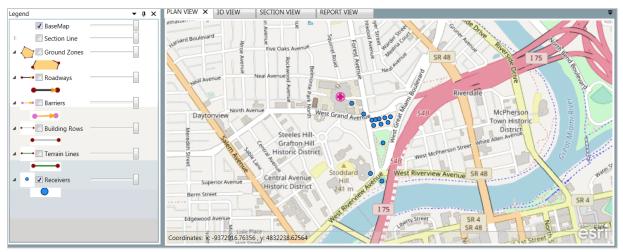


Figure 2-9: Receivers Report View

PLAN VIEW 3D	VIEW	SECTION VIE	W REP	ORT VIEW >	(							
4 4 1 of	H	e 😸 🚱	a 🗐 🕮	₩, +   Pag	e Width	•	Find	Next				
REPORT:				Si	ound-level I	nput: Recei	ivers					
TNMVERSION: 3.0 REPORT DATE:												4 May 2017
CALCULATED WITH	t:		3.0				CALCUL	ATION DATE				2/8/2017 9:22:53 AM
CASE:			TNMB.0 Sta	ındalone We	binar Case		OR	GANIZATION	: Б	nvironmental	Acoustic	s - Gannett Fleming Inc.
PATH: ANALYSIS BY:												
CALCULATION SEQUENCE NUMBER: TNM SERIAL NUMBER:												
							PROJECTA	CONTRACT		TI	VMB.0 St	andalone Webinar Case
							Inpu	t Sound Lev	els and Crit	eria		
			Coo	rdinates (gro	ound)	Height	Existing	Absolute	Relative	Noise	Active	
Receiver Name	Sequenc	e Nb.				above	LA eq	Criterion	Criterion	Reduction	in	Notes
	Numbe	R.R.	Х	Y	Z	Ground				Goal	Calc.	
			[ft]	[ft]	[ft]	[ft]	[dBA]	[dBA]	[dBA]	[dBA]		
Grandview Hospita	1	1 1	-9373312.00	4832508.00	753.00	5.00		0		8	Υ	
Northminster Presbyterian Church		2 10	-9373226.00	4832429.00	751.00	5.00		0		8	Υ	
McKinley Park		3 10	-9373087.00	4832221.00	748.00	5.00		0		8	Υ	
Tennis Courts		4 1	-9373095.00	4831947.00	745.00	5.00		0		8	Υ	
Dayton Art Institute		5 1	-9373177.00	4832001.00	776.00	5.00		0		8	Υ	
West Grand 5		15 2	-9373167.00		749.00	5.00		0		8	Υ	
West Grand 4		16 6	-9373140.00	4832389.00	747.00	5.00		0		8	Υ	
West Grand 1		17 4	-9373033.00		743.00	5.00		0		8	Υ	
West Grand 2		18 4	-9373074.00		743.00	5.00		0	-	8	Υ	
West Grand 3		19 2			743.00	5.00		0		8	Υ	
Palmer 1		20 4	-9373154.00		749.00	5.00		0		8	Y	
Palmer 2		21 4	-9373101.00		742.00	5.00		0		8	Υ	
Palmer 3		22 5	-9373051.00	4832368.00	742.00	5.00	-	0	-	8	Υ	
Receiver <						Page 1	of 1					4 May 2017

Confirm that model identifies receivers' names.

It is helpful to name receivers using street addresses or property names for non-residential properties. Receiver names could also be tied to the stationing for the project. Overall the analyst should use a consistent naming system for all receivers. Some SHAs have guidance on naming receivers.

• Object Details Pane should indicate the number of dwelling units (also known as receptors) represented by each receiver.

#### Check receptor number accuracy for each receiver.

Check that each receiver represents the correct number of receptors. In some cases, one TNM receiver can represent multiple receptors. However, the receptors should be expected to experience similar sound levels for both existing and future conditions and have comparable noise reductions if a barrier was constructed.

Check that all receivers of interest are active.

In some cases a single receiver represents activity areas. A check of that grouping may be needed to ensure an accurate accounting of all impacts and benefits.


Figure 2-10: Receivers Input Data

Receivers												
Receivers	Active	Receiver Na	me	Sequen	ce Number	( [m]	Y [m]	Z [ground] [ft]	Height [ft	# Receptors	Notes	
Levels/Criteria	✓	Grand Silent	Hospital	1	-	9373312	4832505.5	753	5	1		
	✓	Singing Chu	rch	2	-	9373226	4832429	751	5	10		
Adjustment Facto	rs	Quiet Park		3	-	9373087	4832221	748	5	10		
	✓	Tennis Court	ts	4	-	9373095	4831946.5	745	5	2		
	✓	Sound Institu	ute	5	-	9373177	4832000.5	776	5	1		
	✓	Motel REME	L	15	-	9373167	4832384.5	749	5	1		
	✓	Pink Noise R	lestaurant	16	-	9373140	4832388.5	747	5	1		
	✓	101 West Gr	and Ave.	17	-	9373033	4832409	743	5	6		
	✓	105 West Gr	and Ave. (2nd Sto	ory) 18	-	9373074	4832401	743	35	4		
	✓	110 West Gr	and Ave.	19	-	9373115	4832393	743	5	2		
	✓	500 Palmer S	St.	20	-	9373154	4832346.5	749	5	4		
	✓	5050 Palmer	St.	21	-	9373101	4832356	742	5	4		
Receivers Barriers	Roadways	Terrain Lines	Building Rows	Tree Zones	Ground Zone	es Cont	our Zones	User Defined V	ehicles C	output Projec	t Information	Calculation Results

Check accuracy of receiver elevations and heights and accuracy of height above ground for modeled upper-floor receivers.

Check that receiver height is set by default to 5 feet above ground or 5 feet above the floor level for upper floors of multi-story buildings as shown in the "Height" Column in Figure 2-10. Check elevations by opening section (Figure 2-11) and 3D views and checking heights in the receiver Object Details Pane or receivers report.

Figure 2-11: Section View

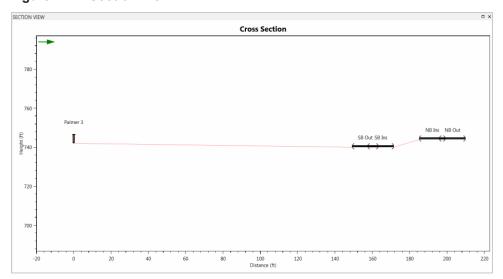

Check that enough modeled receivers are present to account for impacts and benefits.

Check that the analysis identifies all impacts and the modeling extends an adequate distance from the road. The distance needed to identify all impacts will vary from project to project. The impact distance for arterial widening projects may only be a couple of hundred feet while the impact distance for a

A preliminary TNM analysis can identify a conservative distance within which impacts would be expected for a project. The analysis then includes all uses within that distance to ensure identification of all impacts.

new alignment project may be well beyond 500 feet. Similarly, the modeling should extend an adequate distance to ensure all benefits are identified if a barrier is evaluated. This distance varies by locations and may depend on the specific requirements of the noise barrier design process. The reviewer can use the measurement tool to determine the distance from the receivers to the nearest lane.

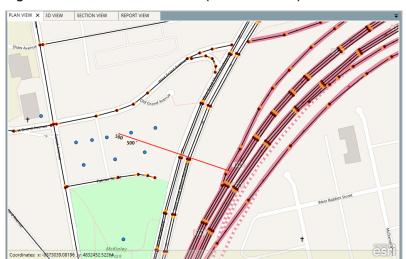


Figure 2-12: Measurement Tool (feet or meters)

Check that the NAC are correct for modeled receivers, the Noise Reduction Design Goal are set per the SHA noise policy, and the threshold for Substantial Increase is set per the SHA noise policy.

Check the "Levels/Criteria" data in the receiver Object Details Pane or receivers report to ensure that the values for all State-specific criteria are properly identified. These criteria include the values for:

- The Noise Abatement Criteria (titled 'Absolute Criterion' within TNM).
- The threshold for substantial increase (titled 'Relative Criterion' within TNM).
- The noise reduction design goal.

SHAs have some flexibility in defining substantial increase, although FHWA requires the minimum value to be between 5 and 15 dB.

Figure 2-13: Receivers "Levels/Criteria" Data

Receivers	Rece	iver Name	Se	equence Numb	er Existing LAeq,	1h Noise Rec	duction Goal [dBA]	Absolute Crite	rion [dBA] Relative C	riterion [dBA]
Levels/Criteria	Gran	d Silent Hospita	l 1		0	8		66	10	
	Singi	ing Church	2		0	8		66	10	
Adjustment Facto	rs Quie	t Park	3		0	8		66	10	
	Tenn	is Courts	4		0	8		66	10	
	Sour	ıd Institute	5		0	8		71	10	
	Mote	el REMEL	15	5	0	8		71	10	
	Pink	Noise Restaura	nt 16	5	0	8		71	10	
	101 \	West Grand Ave	. 17	,	0	8		66	10	
	105 \	West Grand Ave	. 18	3	0	8		66	10	
	110 \	West Grand Ave	. 19	)	0	8		66	10	
	500 1	Palmer St.	20	)	0	8		66	10	
	5050	Palmer St.	21		0	8		66	10	
eceivers Barriers	Roadways	Terrain Lines	Building Rows	Tree Zones (	Fround Zones   C	ontour Zones	User Defined Veh	icles Output	Project Information	Calculation Resu

#### 2.6 Roadways

The TNM project should include modeled roadways for existing and proposed lanes. One TNM roadway may represent multiple lanes. However, FHWA recommends modeling each lane separately for more accurate results (FHWA FAQ). *NCHRP Report 791* provides additional details on input of TNM roadways.

The reviewer can enable the roadway layer (Figure 2-14), review the plan view, and check roadway data in the Object Details Pane or roadways report (Figure 2-15). The reviewer can save and export the roadway report to Excel, Word and PDF to check coordinates and other object details.

FHWA recommends modeling each lane separately.

Figure 2-14: Roadway Plan View


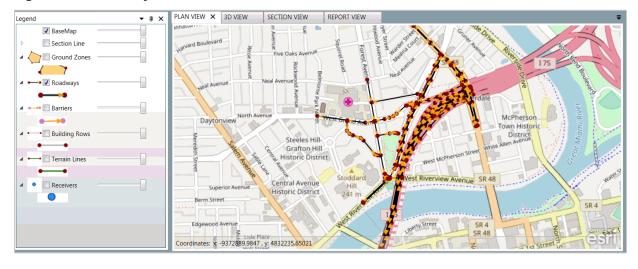



Figure 2-15: Roadway Report View

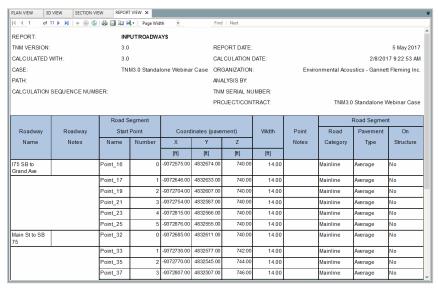

#### Verify assignment of roadway names.

Verify that roadways have unique names that also indicate direction of travel (i.e. Main Street Eastbound) (Figure 2-16).

Figure 2-16: Roadway Input Data

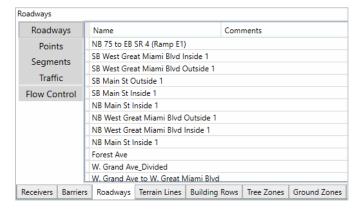

#### Check linkage of roadway point names to stationing.

It is recommended to tie the names of roadway points to the project stationing to provide a link to the project design plans (Figure 2-17). It is recommended that the direction and lane are added to the name of roadway points.


Figure 2-17: Roadway Input Data (showing point names)

Roadways	Roadway: SB 75	Centerl and				
Points	:	Centercane				
	Point Name	Point Number	X [m]	Y [m]	Z [pavement] [ft]	Road Width [ft]
Segments	SB C STA 150	9	-9372514	4832658	764	13
Traffic	SB C STA 150+50	10	-9372564	4832637.5	764	13
Flow Control	SB_C_STA 151	11	-9372638	4832599	763	13
	SB_C_STA 151+50	12	-9372674	4832576	762.5	13
	SB_C_STA 152	13	-9372722	4832540.5	762	13
	SB_C_STA 152+50	14	-9372778	4832493.5	761	13
	SB_C_STA 153	15	-9372803	4832467	761	13
	SB_C_STA 153+50	16	-9372834	4832432	761	13
	SB_C_STA 154	17	-9372864	4832390.5	761	13
	CR C STA 154.50	10	0272014	4022212	761	12
Receivers Barrier	s Roadways Terra	in Lines Buildi	na Rows	Tree Zones	Ground Zones	Contour Zones

#### Verify modeled roadway categories and pavement types.

TNM 3.0 includes three categories of roads: mainline, ramp and shoulder. Check the assignments in the roadway Object Details Pane or the roadways report.


Figure 2-18: Roadway Segment Data

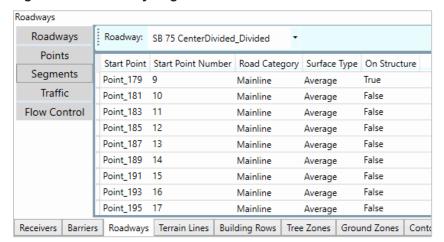

Check the roadways report for road category and pavement type. TNM currently allows the user to select from four pavement types: Dense-graded asphalt concrete (DGAC), open-graded asphalt concrete (OGAC), Portland cement concrete (PCC), and an average pavement type. An average pavement is a pavement type consisting of Reference Energy Mean Emission Levels (REMEL) data measured on DGAC and PCC pavements combined. Use "average" pavement in nearly all situations. FHWA allows the use of other pavement types for TNM validation purposes only.

FHWA must approve a pavement type other than "Average" for modeling future conditions.

Figure 2-19: Roadway Segments

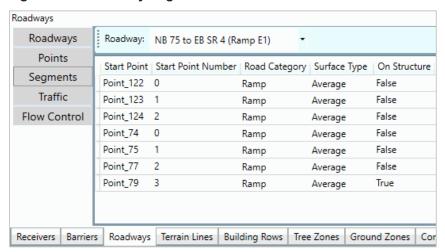

#### Check modeling of roadway shoulders.

FHWA recommends modeling shoulders as roadways with no traffic (FHWA FAQ) when roads are super-elevated and to ensure that the intervening ground is modeled as pavement and that the edge of the roadway is modeled accurately. The NCHRP 791 report also recommended modeling shoulders as separate roadways. Increasing the width of the near roadway is also acceptable and does not require modeling additional roadway.

Check assignment of traffic volumes and speeds to all applicable roadway segments.

Check the roadways Object Details Pane (Figure 2-20) or roadways report (Figure 2-21) to ensure traffic and speeds are assigned correctly. Confirm that traffic volumes and speeds are added for each vehicle category and vehicle speed is assigned for each category.

If the roadway is super-elevated, use separate, slightly overlapping roadways with changing elevations to approximate the cross-slope.

(FHWA FAQ)

HOV and Truck restricted lanes should be reviewed to ensure trucks are not assigned to these lanes.

Figure 2-20: Roadway Traffic Volume and Speed

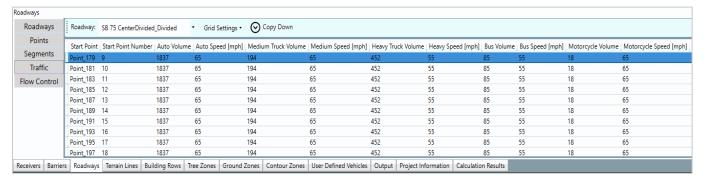


Figure 2-21: Traffic for TNM Vehicles Roadway Report View

PLAN VIEW 30	VIEW SEC	TION VIEW	REPORT VIEW	×									
14 4 7 of	11 ▶ ₩   4		1 4 4 P	age Width	•	Find   Next							
	Road S	Road Segment Start Point		to	Medium	1 Truck	Heavy	Truck	Bu	IS	Motor	cycle	
Roadway	Start			Speed	Volume	Speed	Volume	Speed	Volume	Speed	Volume	Speed	
Name	Name	ne No.	ame No.										
			[Veh/hr]	[mph]	[Veh/hr]	[mph]	[Veh/hr]	[mph]	[Veh/hr]	[mph]	[Veh/hr]	[mph]	
NB 75 Inside	Point_27	14	1837	65	194	65	452	55	0	0	0	C	
	Point_29	15	1837	65	194	65	452	55	0	0	0	C	
NB 75 Center	Point_92	0	1837	65	194	65	452	55	0	0	0	(	
	Point_93	1	1837	65	194	65	452	55	0	0	0	(	
	Point_1	2	1837	65	194	65	452	55	0	0	0	(	
	Point_95	2	1837	65	194	65	452	55	0	0	0	(	
	Point_97	3	1837	65	194	65	452	55	0	0	0	(	
	Point_4	4	1837	65	194	65	452	55	0	0	0	(	
	Point_99	4	1837	65	194	65	452	55	0	0	0	(	
	Point_101	5	1837	65	194	65	452	55	0	0	0	(	
	Point_103	6	1837	65	194	65	452	55	0	0	0	(	
	Point_105	7	1837	65	194	65	452	55	0	0	0	(	
	Point_107	8	1837	65	194	65	452	55	0	0	0	(	
	Point_109	9	1837	65	194	65	452	55	0	0	0	(	
	Point_111	10	1837	65	194	65	452	55	0	0	0	(	
	Point_113	11	1837	65	194	65	452	55	0	0	0	(	
	Point_115	12	1837	65	194	65	452	55	0	0	0	(	
	Point_117	13	1837	65	194	65	452	55	0	0	0	(	
	Point 119	14	1837	65	194	65	452	55	0	0	0	(	

Check speeds do not exceed 75 mph when modeling heavy trucks on roadways with grades greater than 1.5%.

#### Check that traffic control devices are accurately modeled.

Check roadways Object Details Pane or roadways report to determine if roadway traffic flow control devices (i.e. stop sign, traffic signal, Toll Barrier and On Ramp) are entered correctly. In addition, verify that traffic flow control devices are checked for percent of vehicles affected (for example a stop sign affects 100% of vehicles, but a stoplight may only affect 30% of all vehicles) and constrained speed from decelerating and accelerating. TNM 3.0 allows the analyst to add a traffic control at any point on the road and there is no need to break the road into two roadways and place the traffic control device at the beginning of the second roadway as was previously done with TNM 2.5.

Traffic control devices are not shown in the plan or 3D views.

Figure 2-22: Roadway Traffic Control Devices


Roadways										
Roadways	Roadway: NB 75 to EB SR 4 ▼									
Points	Point Name	Daint Non	har Cantral Davis	a Vahiala /	Affected Com-	straint Speed [mph]				
Segments	Point 122	0	None Control Devic	0	0	straint speed [mpn]				
Traffic	Point_123	1	None	0	0					
Flow Control	Point_124	2	None	0	0					
	Point_74	0	None	0	0					
l l	Point_75	1	StopSign	100	35					
	Point_77	2	None	0	0					
	Point_79	3	None	0	0					
	Point_125	7	None	0	0					
	7									
Receivers Barriers	Roadways	Terrain Lines B	uilding Rows Tree	e Zones G	round Zones	Contour Zones U				

TNM does not model true deceleration, however it can be achieved by breaking a roadway into multiple segments with decreasing speeds.

#### Check that roadways on structure are modeled correctly.

Check that roadways are on structure in the Object Details Pane or roadways report. Structures can be solid, such as a fill embankment, or hollow underneath, such as a bridge. Improper modeling of these roadways can affect the noise propagation paths and alter the noise impact and abatement results.


Figure 2-23: Roadway on Structure

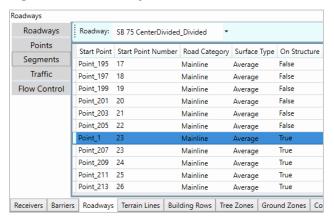

#### Check that multi-lane highways are modeled correctly.

Check that multi-lane highway widths are correct and that inside and outside shoulders are modeled. Confirm that traffic is not assigned to the shoulders.


Figure 2-24: Multi-Lane Roadway Layout

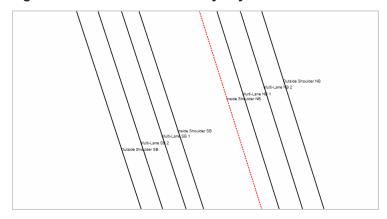

#### Check that roadway elevations are added correctly

FHWA recommends matching horizontal curves within plus or minus 6 feet and vertical curves within plus or minus 1 foot. Check elevations by opening section and 3D views and checking elevations in the roadways Object Details Pane or roadway report.

Figure 2-25: Roadways 3D View

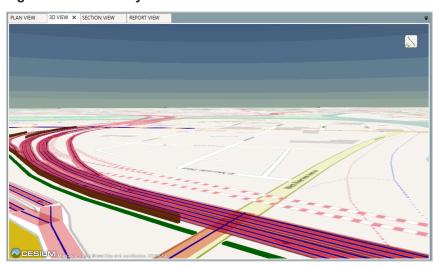

## 2.7 Building Rows

Multiple small buildings, such as a row of houses, act as multiple small barriers with gaps in between. The TNM Building Row input simulates a row of houses as a single long barrier, not with gaps, but with a low transmission loss uniformly along the row, reducing sound levels at receivers behind it.

The reviewer can enable the building rows layer (Figure 2-26), review the plan view, and check building rows data in the Object Details Pane or building rows report (Figure 2-27).

Building rows should only be used when the gaps along a building row is less than 80 percent. If your building percentage is greater than this, input a noise barrier instead of a building row. Furthermore, TNM does not account for the actual location of gaps along a building row. For this reason, if you wish more precise results, you must input each individual building structure as a separate TNM barrier.

Figure 2-26: Building Rows Plan View


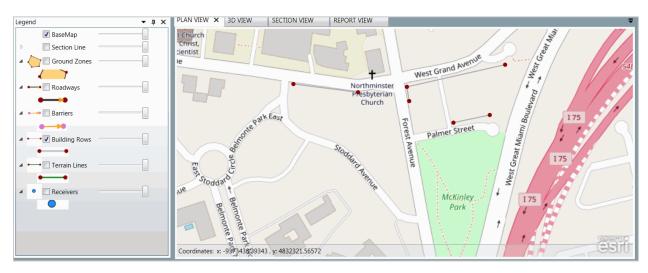


Figure 2-27: Building Rows Report View

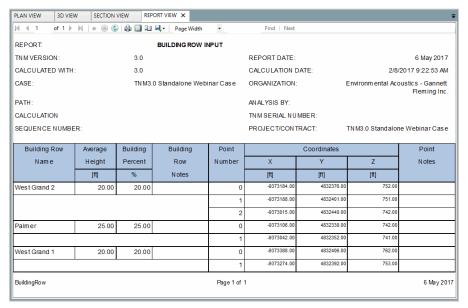


# Confirm that buildings rows are modeled in manner consistent with FHWA guidance.

Confirm that the modeled building rows are shown in the building rows layer. Verify that they are placed in appropriate areas and in the correct locations if the SHA has guidance on it (at the front face of existing receptors, through the center of existing receptors, or at the back face of existing receptors). Typically building rows are placed at the front face of existing receptors.

#### Check that buildings row names are assigned.

Check that building rows have unique names that indicate location (i.e. street name). Figure 2-28 shows the building rows input data.

Figure 2-28: Building Rows Input Data

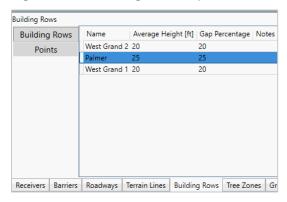

#### Check that building row elevations are correct.

Check the elevations by opening section and 3D views (Figure 2-29) and checking elevations in the building rows Object Details Pane or building rows report.

Figure 2-29: Building Rows 3D View (representing residential homes)



# Check that building row heights and building percentages are correctly modeled.

Check the entered data in the building rows Object Details Pane or building rows report. Verify that building rows have assigned heights as shown in Figure 2-29.

Input a noise barrier instead of a building row, when building percentage greater than 80 percent.

TNM treats a building row like a barrier with a uniform transmission loss (the model allows percentages between 20 and 80) and does not account for the effect of individual gaps.

NCHRP 791 report evaluated TNM sensitivity to building row height, percentage and orientation. The report also addressed the effects of modeling individual buildings as fixed height barriers instead of using building rows.

Modeling individual residences as fixed-height barriers yielded lower levels than modeling building rows. The building *barrier* approach provided better agreement with measured sound levels than building *row* approach due to the sensitivity to actual gaps in the building row.

#### Check that building row elevations are correct.

Check 3D view and building rows Object Details Pane to ensure that building rows are modeled correctly.

#### 2.8 Terrain Lines

TNM terrain lines define where the terrain is located, horizontally and vertically. A terrain line reduces sound levels when it breaks the line-of-sight between a roadway and a receiver. Terrain lines below the line-of-sight generally reduce ground attenuation and increase sound levels. Terrain lines may represent elevation contours, but can also represent the bottom and top of slopes and drainage channels among other surface topography.

TNM terrain lines define where the terrain is located horizontally and vertically. The TNM User's Guide states that typical terrain lines might include:

- the bottom of deep drainage ditches
- the top of a cut for a depressed roadway
- the edge of fill for roadways on fill
- the ridge of an intervening hill
- a line of constant elevation of an intervening hill

The reviewer can enable the terrain line layer (Figure 2-30), review the plan view, and check terrain line data in the Object Details Pane or terrain lines report (Figure 2-31).

Terrain lines should generally be modeled parallel to the primary roadway and no closer than 4 feet apart.

Figure 2-30: Terrain Lines Plan View

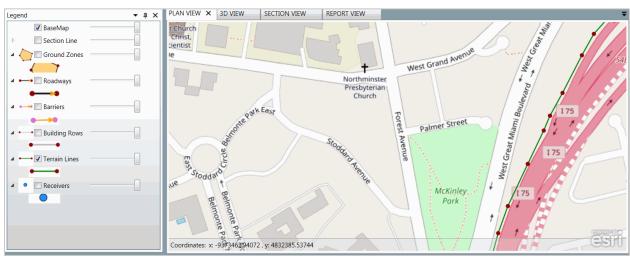


Figure 2-31: Terrain Lines Report View

PLAN VIEW SECTION VIEW	REPORT VIEW × 3D VIEW									
4 4   1   of 1	8 6 A I A I	Page Width	Fino	I   Next						
REPORT: TERRAIN LINE INPUT										
TNM VERSION:	3.0		REP	REPORT DATE:		6 May 2017				
CALCULATED WITH:	3.0		CAL	CALCULATION DATE:		2/8/2017 9:22:53 AM				
CASE:	TNM3.0 Stand	alone Webina	r Case ORG	ANIZATION:		Environmental Acoustics - Gannett Fleming Inc.				
PATH:			ANA	ANALYSIS BY:						
CALCULATION	ALCULATION THM SERIAL NUMBER:									
SEQUENCE NUMBER:			PRO	JECT/CONTRACT:	TNM3.0 Sta	andalone Webinar Case				
Terrain Line	Terrain	Point Coordinates (ground)			)	Point				
Name	Line	Number	Х	Υ	Z	Notes				
	Notes		[ft]	[ft]	[ft]					
I-75 Base of slope 1		0	-9372743.00	4832584.00	740.00					
	•	1	-9372778.00	4832556.00	740.00					
		2	-9372816.00	4832517.00	740.00					
		3	-9372847.00	4832483.00	740.00					
		4	-9372868.00	4832445.00	740.00					
		5	-9372902.00	4832379.00	740.00					
1		6	-9372924.00	4832339.00	740.00					

#### Verify that the model includes significant terrain features.


Review the plan view to see any modeled terrain lines and check the associated input data in the terrain lines Object Details Pane or terrain lines report. Modeled terrain should try to match the actual terrain where it varies by more than 5 feet vertically and 4 feet horizontally as noted above. Models that include terrain that is different from what exists in the field will produce erroneous results. Terrain lines can, and sometimes should, be used in conjunction with ground zones – for example a lake ground zone, surrounded by a terrain line to show the ground elevation denoting the shoreline area.

Because TNM cuts sections from receivers to roadways when calculating sound levels, terrain lines should generally be modeled parallel to the primary roadway. NCHRP 791 evaluated terrain lines and recommended that terrain lines also be used to model the ground beneath structure roadways. NCHRP Report 791 provides additional details on input of TNM terrain lines.

#### Verify that terrain lines names are assigned.

Verify that terrain lines have unique names that provide some indication of location (i.e. ditch, top of cut) (Figure 2-32).

Figure 2-32: Terrain Lines Input Data

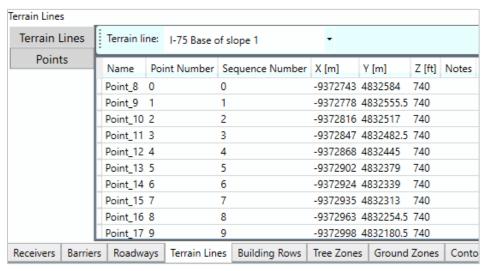

#### Check that terrain lines elevations are correct.

Check section view (Figure 2-33) and terrain lines Object Details Pane to ensure that terrain lines are modeled correctly and reflect real world conditions as they are, and as they are expected to be.

Figure 2-33: Terrain Lines Section View

#### 2.9 Ground Zones

The properties of the intervening ground affect sound levels. Some previous models assumed that sound propagating over a "hard" surface, such as pavement, decreases at 3 dB per doubling of distance while sound propagating over a "soft" surface, such as lawn, decreases at 4.5 dB per doubling of distance. Sound propagation is more complicated and changes with distance and surface characteristics. TNM includes the eight different ground types shown in Figure 2-34.

Figure 2-34: TNM Ground Types

Effective Flow Resistivity (Rayls)				
Pavement	20,000			
Water	20,000			
Hard Soil	5,000			
Loose Soil	500			
Lawn	300			
Field Grass	150			
Granular Snow	40			
Powder Snow	10			

The NCHRP 791 report includes an expanded list of ground types, which can be used as the basis for "custom" ground zones within TNM. This may be especially important for model validation.

Avoid overlapping or matching edges with the adjacent roadways when adding a ground zone median.

The minimum recommended median width is 10 feet.

The reviewer can enable the ground zone layer (Figure 2-35), review the plan view, and check ground zone data in the Object Details Pane or ground zones report (Figure 2-36).

Figure 2-35: Ground Zones Plan View


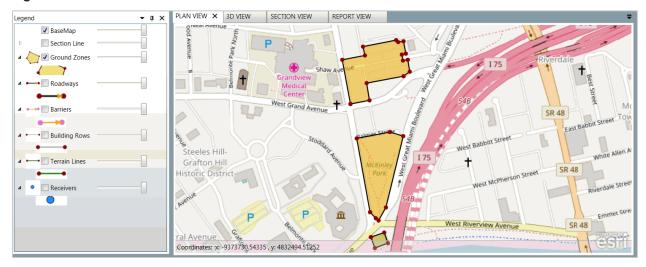


Figure 2-36: Ground Zones Report View

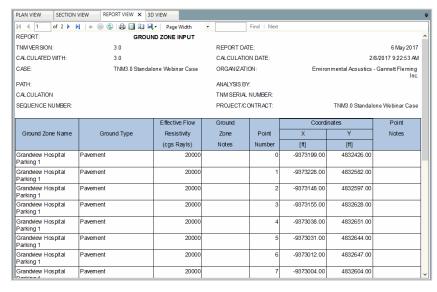

#### Check that model includes significant ground zones.

Check that the model includes ground zones to represent existing and/or proposed areas that are different from the default ground type for the model. The default ground type is typically set to "Hard Soil."


Use ground zones only where the ground differs from the default ground-type.

NCHRP 791 concluded that ground zones are not needed for small areas and that the ground zones need to comprise 20% of the distance between the road and the receiver to change sound levels my one dB or more.

#### Check that ground zone names and types are correctly assigned.

Check that ground zone input data in the ground zones Object Details Pane (Figure 2-37) or ground zones report.

Figure 2-37: Ground Zones Input

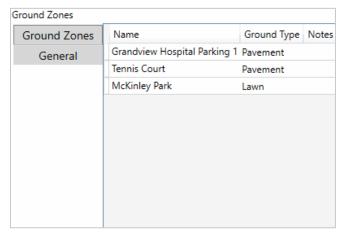

A ground zone is required to define the type of ground inside tree zones.

#### 2.10 Tree Zones

A model may include tree zones that meet FHWA's policy which states that trees must be "sufficiently dense to completely block the view along the propagation path. This requires dense undergrowth as well as dense tree-top foliage. Do not include a TNM tree zone unless its vegetation is sufficiently dense."

The reviewer can enable the tree zone layer (Figure 2-38), review the plan view, and check tree zone data in the Object Details Pane or tree zones report (Figure 2-39). The reviewer should check if another ground type other than the default is required. A ground zone is required to define the type of ground inside tree zones. For example, if you are using a tree zone, surround the tree zone with a ground zone of Loose Soil to account for the ground effects of that tree zone.

Figure 2-38: Tree Zones Plan View


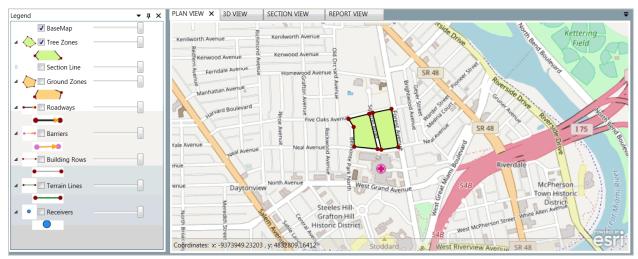


Figure 2-39: Tree Zones Report View

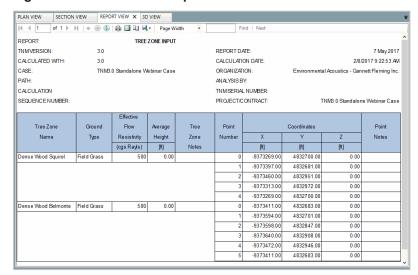

## Confirm that model includes tree zones and that they meet FHWA's definition.


Review the plan view (Figure 2-38) to see any modeled tree zones and check the associated input data in the tree zones Object Details Pane or tree zones report. Verify that existing and/or proposed tree zones meet FHWA's tree zone definition. If the model includes a tree zone(s) for future conditions, then there should be a reasonable expectation that the trees will still exist at that time. Use of tree zones in the future should be explained in the Noise Study Report during the discussion of land uses.

Narrow tree zones (up to 50 feet) typically provide no noise reduction to the nearest portions of a roadway. However, omitting these narrow tree zones

FHWA policy states
that tree zones
should consist of
long, wide regions
of heavy, nondeciduous woods
and undergrowth,
not just individual
trees or several rows
of trees.

could increase the length of a barrier due since there may be a significant distance through the tree zone at shallow angles as shown in Figure 2-40.

Figure 2-40: Roadway Visibility through a Tree Zone (NCHRP 791)

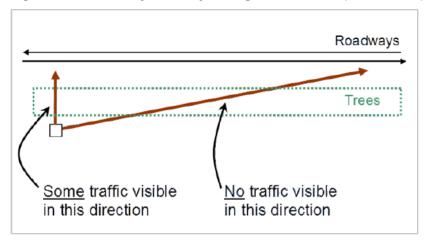

#### Check assignment of tree zone names and ground types.

Check tree zone input data in the tree zones Object Details Pane (Figure 2-41) or tree zones report.

Verify that the ground type within the tree zone is consistent with what exists. There is no need to model a soft-ground ground zone around the tree zone, though it is not necessarily incorrect to do so and it should not affect the results.


Figure 2-41: Tree Zones Height and EFR



#### Check accuracy of tree zone elevations.

Check section and 3D views and the tree zone Object Details Pane (Figure 2-42) to ensure that tree zones are modeled correctly. This may involve including terrain lines in and/or around the tree zone in addition to the elevation defined for the tree zone itself.

Figure 2-42: Tree Zones Input Data

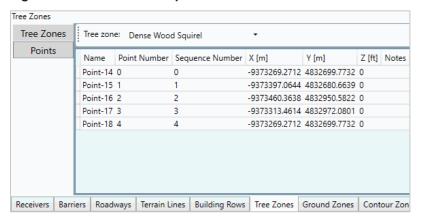

#### 2.11 Barriers

#### Verify modeling accuracy of barriers in the TNM project.

The TNM Project should show barriers modeled as equally spaced segments, it is preferable to use 100 feet segments for preliminary noise analysis and 25 -50 feet for final design noise analysis to align with the stationing of the adjacent highway. Please note that this may not match the actual design segments of the barrier which may be 10–20 feet in length. Barriers should be optimized horizontally and vertically to provide optimal design of the noise mitigation.

The reviewer can enable the barriers layer (Figure 2-43), review the plan view and check barrier data in the Object Details Pane or barriers report (Figure 2-44).

Barriers should be minimally 8 times the distance between the barrier and the most-distant receiver, with the receiver centered along the barrier.

Figure 2-43: Barriers Plan View Layout


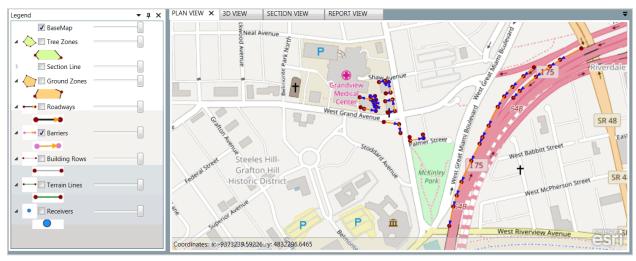


Figure 2-44: Barriers Report View

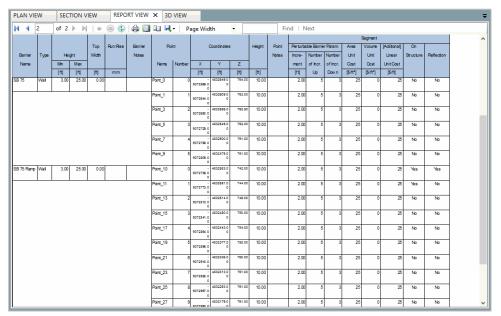

Barriers should be extended 4 times the distance between the barrier and the last receiver at the edge of the barrier.


#### Check accuracy of barriers heights and perturbation increments.

Check 3D view (Figure 2-45) and the barriers Object Details Pane (Figure 2-46) or barriers reports to ensure that barriers heights are modeled correctly and that the number of perturbations was assigned in accordance with the SHA noise policy. Typically, perturbations are set at increments of 2 feet starting from 8 feet and going to the maximum allowable height, usually 20 – 22 feet.

Figure 2-45: 3D View of Barriers Segment Perturbation



Figure 2-46: Barriers Segment Perturbation Input

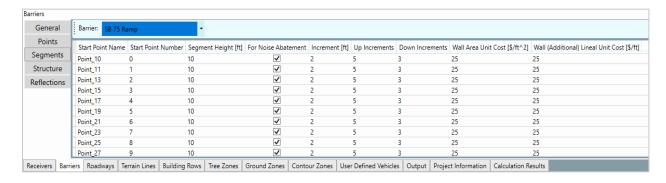


#### Verify that large buildings are modeled as barriers.

Verify that large buildings are modeled as fixed heights barriers (not for noise abatement) in accordance with FHWA guidance. Check the 3D view (Figure 2-47), the barriers Object Details Pane (Figure 2-48) or the barriers report to ensure that large buildings heights are modeled correctly. Buildings may be modeled based on the front face of the building, or the front and sides as shown below. Modeling the entire building envelope adds processing time without increasing the accuracy of noise level results and is not necessary.

Figure 2-47: Large Buildings Modeled as Barriers



Figure 2-48: Large Buildings Input Data

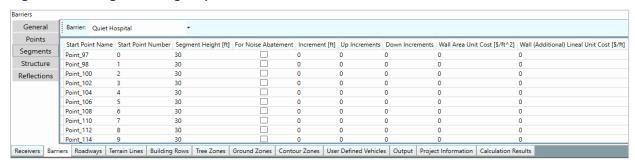


## Check that parapet walls and median barriers are modeled per the noise policy.

Check that median barriers and parapet walls (Jersey barriers) are modeled as fixed heights barriers (typically 3 or 3.5 feet, as indicated in SHA specifications) in accordance with FHWA guidance. Check the 3D view, the barriers Object Details Pane (Figure 2-49) or the barriers report to ensure that median/jersey barriers heights are modeled correctly

Model Jersey barriers using fixedheight barriers; this applies to both roadside and median jersey barriers.


Figure 2-49: Jersey Barriers Input Data

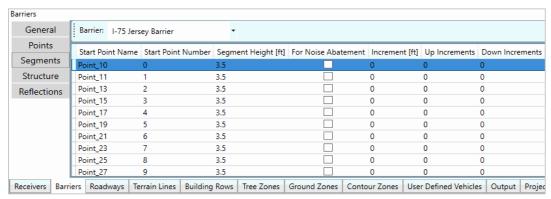

#### Check modeling accuracy of barriers on structure.

Check the barriers Object Details Pane (Figure 2-50) or the barriers report to ensure that barriers on structured are paired correctly with roadway segments.

Figure 2-50: Barriers Segments on Structure

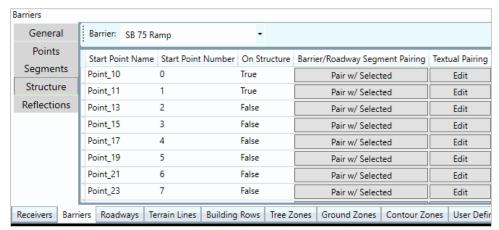

Check assignment of barriers reflection surfaces

TNM 3.0 includes the ability for receivers on the opposite side of the highway to account for barrier reflection from the highway side (Figure 2-51). Check the barriers Object Details Pane (Figure 2-52) or the barriers report to ensure that barriers reflection are modeled correctly. Where the table shows Reflections as 'True', that is a reflective surface barrier. Where it shows 'False', that is an absorptive surface barrier.

Typically, barriers have a reflective surface unless the SHA noise policy specifies when and how absorptive treatments can be used. Most SHAs that allow use of absorptive materials do so in cases where there are barriers on


Structure barrier segments may shield both structure roadway segments and non-structure roadway segments.

both sides of the roadway, or where there is a barrier on one side, but the opposite noise-sensitive land uses did not qualify for abatement, or on the back side of a barrier where there is a roadway between the barrier and the receptors – such as a frontage road.

Figure 2-51: Barrier Reflection Plan View



Figure 2-52: Barriers Noise Reflection Coefficient (NRC)

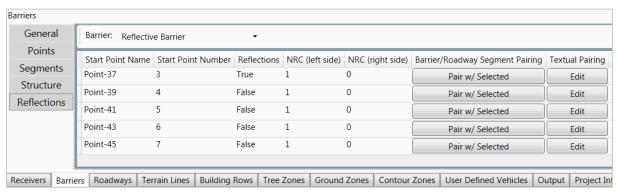

#### Check parallel barrier analysis

When a roadway is flanked by parallel reflective barriers, retaining walls, or a combination of the two, sound reflects back and forth across the roadway many times before ultimately progressing outwards towards nearby receivers. These multiple reflections increase the sound level at nearby receivers, this noise increase due to reverberation may partially offset the noise reduction due to the barrier construction.

To avoid a reduction in the performance of parallel reflective noise barriers, check the width-to-height ratio (W:H) of the roadway section to the barriers (Figure 2-53). If the W:H is less than 10:1, then parallel barrier analysis is required. When the W:H is between 10:1 and 20:1, then parallel barrier analysis is recommended, but if the W:H is more than 20:1, then parallel barrier analysis is not required.

Check the barriers Object Details Pane (Figure 2-54) to ensure that barriers reflection are modeled correctly. Where the table shows Reflections as 'True', that is a reflective surface barrier. Where it shows 'False', that is an absorptive surface barrier. Check the parallel barrier by clicking on "start section" under the Calculate Section button. Draw a section across the two barriers, then view the results of sound level degradation in the Object Details Pane (Figure 2-55).

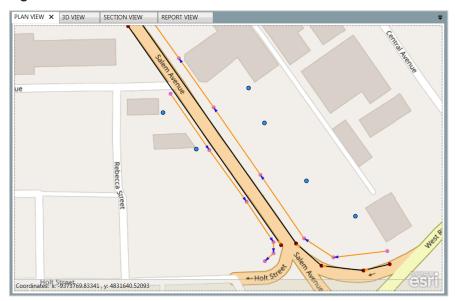


Figure 2-53: Parallel Reflection Plan View

Figure 2-54: Parallel Barriers Noise Reflection Coefficient (NRC)

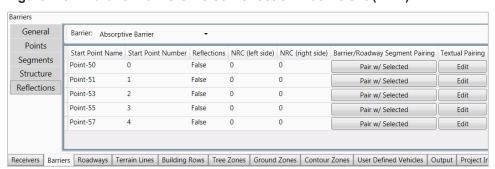


Figure 2-55: Parallel Barrier Analysis Results

Road Segment Pr	ogress:						
Receiver Progress	s: =						
Current Status:	Ne	w Case					
Receiver Name	Calculated	Noise Reduction Difference	Noise Reduction	With Barrier Level	No Barrier Level	Meet Noise Reduction Goal	Parallel Increase
Receiver1	True	6.8	14.8	69.9	84.7	True	0.0
Receiver2	True	1.7	9.7	72.2	81.9	True	0.0
Receiver3	True	-2.4	5.6	69.8	75.4	False	0.0
Receiver4	True	-4.8	3.2	67.6	70.8	False	0.0
Receiver5	True	5.7	13.7	68.4	82.0	True	0.0
Receiver6	True	-1.0	7.0	69.3	76.3	False	0.0
Receiver7	True	-4.3	3.7	67.5	71.3	False	0.0

#### Check accuracy of barriers elevation.

Check 3D view (Figure 2-56) and the barriers Object Details Pane to ensure that barriers are modeled correctly. At a minimum, barriers should be tall enough to cut the line of site from a receptor to the roadway. They should also be located close to the roadway (as shown below) or close to the receptors. In the case of an on-ramp or off-ramp, there should be some overlap between a barrier for the mainline and a second barrier for the ramp (as shown in Figure 2-56).

Figure 2-56: Barriers 3D View



### 3.0 Review of Specific Projects in TNM 3.0

The following Specific Projects are representative of more widely used project types and of the common modeling errors associated with them. Recently, roundabouts are more commonly recommend by highway engineers as an alternative solution to un-signalized intersections. In addition, signalized and unsignalized intersection projects are more common nowadays as more states are developing projects on local arterial roadways to accommodate increasing traffic volumes.

- Modeling Roundabout. There any many aspects to the design of roundabouts, key of which are entry, circulation and exit speeds. Typical design of roundabouts consists of three main travel paths through a roundabout: through, right-turn, and left-turn, all with associated curve radii. NCHRP 791 described modeling techniques to model roundabouts. TNM 3.0 was used to show these modeling techniques and how reviewers can check that roundabouts are modeled accurately.
- Modeling Unsignalized Intersections. It is recognized by noise practitioners that unsignalized intersection are complicated in modeling as there is need not only for acceleration modeling but to model deceleration as the vehicles approach the intersection. Furthermore, the main issue with un-signalized intersections is over-modeling or micromodeling without any improvement in the accuracy of the results. The converse issue would be under-modeling and missing potentially important effects on received sound levels, particularly the effects of accelerating vehicles, when noise-sensitive receptors are nearby. NCHRP 791 described modeling techniques to model signalized intersections. TNM 3.0 was used to show these modeling techniques and how reviewers can check that signalized intersections are modeled accurately.
- Modeling Signalized Intersections. Signalized intersections are more complicated to model because of the need to capture acceleration away from the stopping point and the percentage of vehicles on the approaching roadway that do not decelerate to a stop. Instead, they cruise through the intersection during the green phase of the traffic signal. NCHRP 791 described modeling techniques to model signalized intersections. TNM 3.0 was used to show these modeling techniques and how reviewers can check that signalized intersections are modeled accurately.

#### 3.1 Roundabout


Roundabouts have become a more and more common design feature for regular intersections and for highway entrance and exit termini in the last 15 years. A modern roundabout is characterized by a generally circular shape with counterclockwise flow, a single lane or multiple lanes and use of yield signs at the entries rather than stop signs or signals. The main issue with roundabouts is finding a level of detail in modeling that achieves accurate results while avoiding over-modeling that does not improve the results. Modeling roundabouts is challenging as there is need to correctly account for vehicles accelerating and decelerating during the approach and departure from the roundabouts.

FHWA TNM computes the acoustical effect of acceleration as vehicles pull away from trafficcontrol devices such as stop signs, toll booths/barriers, and traffic signals, and also along highway

entrance ramps. FHWA TNM calls roadways with traffic-control devices "flow control" or "interrupted flow" roadways. An interrupted flow roadway is designated by choice of a "Control Device" in the FHWA TNM Roadway Input dialog box. When this choice is made, the modeler-supplied speeds on the traffic tab of the roadway input dialog box are treated by FHWA TNM as the final speeds that vehicles will try to reach during their acceleration. The modeler provides a starting speed for all traffic on the roadway, called the "speed constraint," which would be zero for a stop sign, but which could be non-zero for an entrance ramp, as an example. The modeler also provides a percentage from 0 to 100% for "vehicles affected," which, in the case of a control device such as an entrance ramp, results in a percentage of the traffic to experience acceleration, while the remaining percentage is modeled as cruising along the roadway at the modeler-provided speeds.

FHWA TNM has no built-in function for modeling deceleration. NCHRP Report 311 defined two "zones of influence" (ZOIs) to represent the last two segments of a roadway being used to model deceleration, as illustrated in Figure 3-1. The reviewer should check NCHRP Report 791 for guidelines on the lengths of these segments, as a function of approach speed, and "equivalent speeds" to use for each vehicle type on each segment. Generally, the noise analyst reduces the modeled speed as the vehicles approach the roundabout.

Figure 3-1: ZOIs for a Deceleration Roadway (NCHRP Report 311)

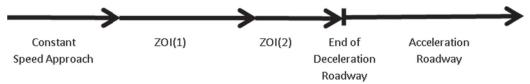

The screenshots shown below are meant as an example (Figure 3-2) to illustrate how the reviewer should check the modeling of a roundabouts. The receivers were modeled only on one side to speed the model runtime.

PLAN VIEW X 3D VIEW SECTION VIEW REPORT VIEW

Coordinates: x: 239.89377 , y: 195.22561

Figure 3-2: Plan View of Roundabout Modeling

NCHRP 791 recommends modeling an approach and departure legs for each roadway. Check the approach leg (deceleration) is modeled by a constant speed (highlighted) equal to the posted speed up to the beginning of the roundabout as shown in Figure 3-3. Verify there is no flow control applied for the approach leg as shown in Figure 3-4.

Figure 3-3: Traffic Volume and Speeds of Approach Leg


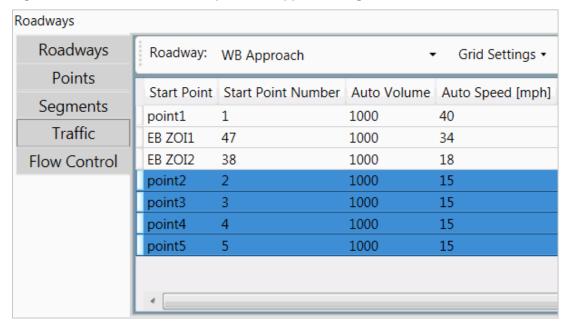


Figure 3-4: Flow Control of Approach Leg

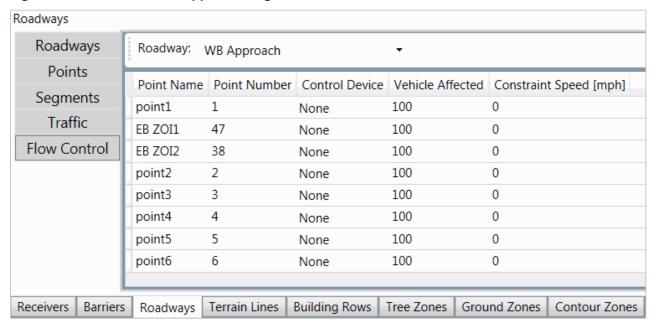

Check the departure leg (accelerated) is modeled by constant-speed (posted speed) roadway that will start at the exit point from the roundabout as shown in Figure 3-5. Verify that a flow control acceleration roadway would be modeled from the exit point from the roundabout to the end of the modeled site as shown in Figure 3-6. Check the roadway have a "Speed Constraint" (starting speed) and 100% vehicles affected with the posted or operating speed.

Figure 3-5: Traffic Volume and Speeds of Departure Leg


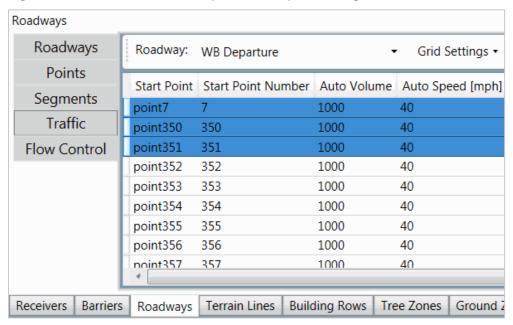


Figure 3-6: Flow Control of Departure Leg

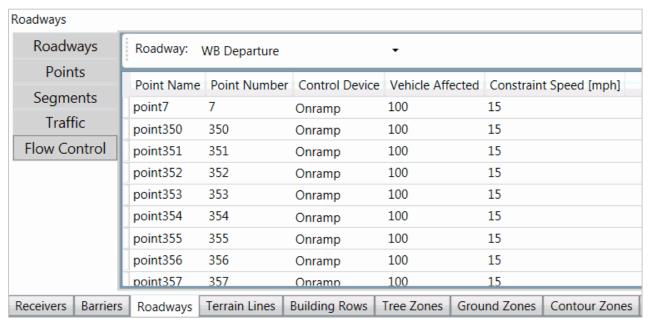

#### 3.2 Unsignalized Intersections

The main issue with unsignalized intersections is over-modeling or micro-modeling without any improvement in the accuracy of the results. The converse issue would be under-modeling and missing potentially important effects on received sound levels, particularly the effects of accelerating vehicles, when noise-sensitive receptors are nearby.

FHWA TNM computes the acoustical effect of acceleration as vehicles pull away from traffic-control devices such as stop signs. FHWA TNM calls roadways with traffic-control devices "flow control" or "interrupted flow" roadways. An interrupted flow roadway is designated by choice of a "Control Device" in the FHWA TNM Roadway Input dialog box. When this choice is made, the modeler-supplied speeds on the traffic tab of the roadway input dialog box are treated by FHWA TNM as the final speeds that vehicles will try to reach during their acceleration. The modeler provides a starting speed for all traffic on the roadway, called the "speed constraint," which would be zero for a stop sign. The modeler also provides a percentage from 0 to 100% for "vehicles affected," which, in the case of a control device such as a stop sign will result in 100% of the traffic to experience acceleration.

The screenshot in Figure 3-7 illustrates how the reviewer should check the accuracy of an unsignalized intersection project. The receivers were modeled only on one side to speed the model runtime.

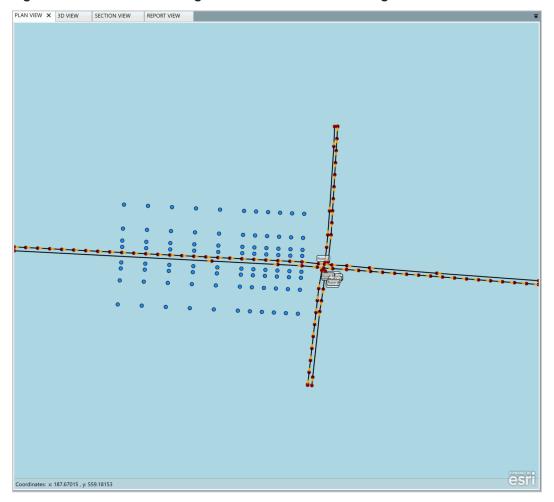


Figure 3-7: Plan View of Unsignalized Intersection Modeling

For modeling unsignalized intersection, NCHRP 791 recommends to partially model the movements of one of the roads and avoid all of the intersecting FHWA TNM points. In this case, model the road with the most traffic (or perhaps the most adjacent receivers) as *continuous*, while the cross road (lesser traffic) will be modeled as an approach and departure leg. There is no need for modeling of reduced speeds for deceleration unless the posted speed is high because of the dominance of noise from the percentage of traffic cruising through the stop sign and the percentage of traffic accelerating from a stopped condition on the departure leg of the intersection.

Check that the roadway with more traffic is modeled with the posted speed on the approaching leg Figure 3-8) and connected at the stop line to a flow control acceleration roadway that crosses through the intersection and proceeds on the departing leg. Verify that the flow control on the departure leg roadway would have a "Speed Constraint" (starting speed) of *0 mph and 100% vehicles affected* as shown in Figure 3-9.

39

Figure 3-8: Main Roadway Traffic Volume and Speeds of Approach Leg

Roadways						
Roadways	Roadway:	WB Approach		Grid Settings • Opy Down		
Points	Start Point	Start Point Number	Auto Volume	Auto Speed [mph]	Medium Truck Volume	Medium Speed [mph]
Segments	point1	1	1000	40	25	40
Traffic	point2	47	1000	40	25	40
Flow Control	point3	38	1000	40	25	40
	point4	2	1000	40	25	40
	point5	3	1000	40	25	40
	point6	4	1000	40	25	40
	point7	5	1000	40	25	40

Figure 3-9: Main Roadway Flow Control of Departure Leg

Roadways					
Roadways	Roadway:	WB Departure		•	
Points	Point Name	Point Number	Control Device	Vehicle Affected	Constraint Speed [mph]
Segments	point7	7	StopSign	100	0
Traffic	point350	350	StopSign	100	0
Flow Control	point351	351	StopSign	100	0
	point352	352	StopSign	100	0
	point353	353	StopSign	100	0
	point354	354	StopSign	100	0
	point355	355	StopSign	100	0
	point356	356	StopSign	100	0
	point357	357	StopSign	100	0

Check that the roadway with lesser traffic is modeled by a constant-speed (posted speed) on the approach leg, as shown in Figure 3-10. Verify that the departing leg is modeled by a flow control acceleration roadway starting just past the main roadways using 100% vehicles affected and a "Speed Constraint" (starting speed) of 20 mph to represent speed as the vehicles exit the intersection, as shown in Figure 3-11.

Figure 3-10: Local Roadway Traffic Volume and Speeds of Approach Leg

Roadways						
	Roadway:	NB Approach	,	<ul> <li>Grid Settings ▼</li> </ul>	O Copy Down	
Points	Start Point	Start Point Number	Auto Volume	Auto Speed [mph]	Medium Truck Volume	Medium Speed [mph]
Segments	point24	24	1000	40	25	40
Traffic	point25	25	1000	40	25	40
Flow Control	point366	366	1000	40	25	40
	point367	367	1000	40	25	40
	point368	368	1000	40	25	40
	point369	369	1000	40	25	40
	point370	370	1000	40	25	40
	point371	371	1000	40	25	40
	point372	372	1000	40	25	40
	point373	373	1000	40	25	40

Figure 3-11: Local Roadway Flow Control of Departure Leg

Roadways					
Roadways	Roadway: N	NB Departure		•	
Points	Point Name	Point Number	Control Device	Vehicle Affected	Constraint Speed [mph]
Segments	point34	34	StopSign	100	20
Traffic	point35	35	StopSign	100	20
Flow Control	point374	374	StopSign	100	20
	point375	375	StopSign	100	20
	point376	376	StopSign	100	20
	point377	377	StopSign	100	20
	point378	378	StopSign	100	20
	point379	379	StopSign	100	20

#### 3.3 Signalized Intersections

The main issue with signalized intersections is over-modeling or micro-modeling without any improvement in the accuracy of the results. The converse issue would be under-modeling and missing potentially important effects on received sound levels, particularly the effects of accelerating vehicles, when noise-sensitive receptors are nearby.

FHWA TNM computes the acoustical effect of acceleration as vehicles pull away from traffic-control devices such as traffic signals. FHWA TNM calls roadways with traffic-control devices "flow control" or "interrupted flow" roadways. An interrupted flow roadway is designated by choice of a "Control Device" in the FHWA TNM Roadway Input dialog box. When this choice is made, the modeler-supplied speeds on the traffic tab of the roadway input dialog box are treated by FHWA TNM as the final speeds that vehicles will try to reach during their acceleration. The modeler provides a starting speed for all traffic on the roadway, called the "speed constraint," which would be zero for a traffic signal. The modeler also provides a percentage from 0 to 100% for "vehicles"

affected," which, in the case of a control device such as a stop sign will result in 100% of the traffic to experience acceleration.

The screenshots shown below are meant as an example (Figure 3-12) to illustrate how the reviewer should check the accuracy of a signalized intersection project. The receivers were modeled only on one side to speed the model runtime.

Coordinates: x: 187 &POIS, y; 559, 18153

Figure 3-12: Plan View of Signalized Intersection Modeling

For modeling signalized intersection, NCHRP 791 recommends to partially model the movements of one of the roads and avoid all the intersecting FHWA TNM points. In this case, model the road with the most traffic (or perhaps the most adjacent receivers) as *continuous*, while the cross road (lesser traffic) will be modeled as an approach and departure leg. There is no need for modeling of reduced speeds for deceleration unless the posted speed is high because of the dominance of noise from the percentage of traffic cruising through the signal and the percentage of traffic accelerating from a stopped condition on the departure leg of the intersection.

Check that the roadway with more traffic is modeled with the posted speed on the approaching leg (Figure 3-13) and connected at the stop line to a flow control acceleration roadway that crosses through the intersection and proceeds on the departing leg. Verify that the flow control on the

departure leg roadway would have a "Speed Constraint" (starting speed) of <u>0 mph and 50% vehicles</u> <u>affected</u> as shown in Figure 3-14.

Figure 3-13: Main Roadway Traffic Volume and Speeds of Approach Leg

Roadways						
Roadways	Roadway:	WB Approach	,	▼ Grid Settings ▼	O Copy Down	
Points	Start Point	Start Point Number	Auto Volume	Auto Speed [mph]	Medium Truck Volume	Medium Speed [mph]
Segments	point1	1	1000	40	25	40
Traffic	point2	47	1000	40	25	40
Flow Control	point3	38	1000	40	25	40
	point4	2	1000	40	25	40
	point5	3	1000	40	25	40
	point6	4	1000	40	25	40
	point7	5	1000	40	25	40

Figure 3-14: Main Roadway Flow Control of Departure Leg

Roadways							
	Roadway: WB Departure						
Points	Point Name	Point Number	Control Device	Vehicle Affected	Constraint Speed [mph]		
Segments	point7	7	TrafficLight	50	0		
Traffic	point350	350	TrafficLight	50	0		
Flow Control	point351	351	TrafficLight	50	0		
	point352	352	TrafficLight	50	0		
	point353	353	TrafficLight	50	0		
	point354	354	TrafficLight	50	0		
	point355	355	TrafficLight	50	0		
	point356	356	TrafficLight	50	0		
	point357	357	TrafficLight	50	0		

Check that the roadway with lesser traffic is modeled by a constant-speed (posted speed) on the approach leg, as shown in Figure 3-15. Verify that the departing leg is modeled by a flow control acceleration roadway starting just past the main roadways using 50% vehicles affected and a "Speed Constraint" (starting speed) of 20 mph to represent speed as the vehicles exit the intersection, as shown in Figure 3-16.

Figure 3-15: Local Roadway Traffic Volume and Speeds of Approach Leg

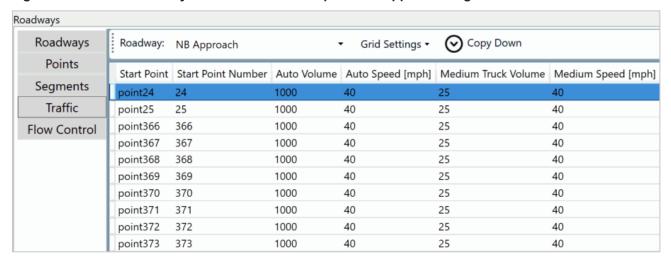


Figure 3-16: Local Roadway Flow Control of Departure Leg

Roadways					
Roadways	Roadway:	NB Departure		•	
Points	Point Name	Point Number	Control Device	Vehicle Affected	Constraint Speed [mph]
Segments	point34	34	TrafficLight	50	20
Traffic	point35	35	TrafficLight	50	20
Flow Control	point374	374	TrafficLight	50	20
	point375	375	TrafficLight	50	20
	point376	376	TrafficLight	50	20
	point377	377	TrafficLight	50	20
	point378	378	TrafficLight	50	20

### 4.0 Identifying Challenges in TNM Analysis

This section identified challenges in TNM 3.0 analysis and common problems that TNM reviewer need to confirm that have been conducted for any noise analysis.

Table 4-1: Summary of Common TNM Modeling Issues

TNM Object	Issue
Roadways	<ul> <li>Incorrect elevations</li> <li>Roadways are not extended an adequate distance past the end receivers</li> <li>Roadway widths not assigned properly (gaps of default ground type between modeled roadways because pavements widths do not overlap)</li> <li>Traffic flow devices not modeled correctly or al all</li> <li>Roadways on structure not modeled correctly or at all</li> <li>Vertical geometry not modeled accurately, more points needed to define vertical curves</li> </ul>
Traffic	<ul> <li>Incorrect truck percentages/volumes</li> <li>Incorrect/missing speeds</li> <li>Roadways missing traffic</li> <li>Restricted use lanes shown as open to all traffic</li> </ul>
Receivers	<ul> <li>Incorrect elevations</li> <li>Missing TNM receivers for noise-sensitive uses</li> <li>TNM receivers represent land uses that are not noise-sensitive (i.e. offices and restaurants with no exterior areas, Category F properties)</li> <li>Number of dwelling units not assigned</li> <li>Dwelling units assigned for non-Category B uses (except for extended stay hotels which are Category C, but considered similarly to apartments)</li> <li>Receiver represents multiple land uses that would not be expected to have comparable sound levels and insertion losses</li> <li>Receivers not consistently located (i.e. back yards, front yards, distance from façade, etc.)</li> </ul>
Barriers	<ul> <li>Barriers not modeled at the most effective location</li> <li>Fixed height barriers (i.e. buildings) not modeled or modeled incorrectly</li> <li>Barriers on structure not modeled correctly or at all</li> </ul>
Building Rows	<ul> <li>Building rows missing/not modeled</li> <li>Not enough points to accurately define the terrain</li> </ul>
Terrain Lines	Significant terrain features not modeled or not accurately modeled
Ground Zones	Large ground zones missing/not modeled
Tree Zones	<ul> <li>Tree zones modeled that do not meet FHWA's definition or are not likely to exist in the design year</li> <li>Not enough points to accurately define the terrain</li> </ul>

### 5.0 References

- [1] Procedures for Abatement of Highway Traffic and Construction Noise, 23 CFR 772, Federal Highway Administration, July 2010.
- [2] Highway Traffic Noise: Analysis and Abatement Guidance, Federal Highway Administration, December 2011.
- [3] NCHRP Report 791 Supplemental Guidance on the Application of FHWA's Traffic Noise Model (TNM).
- [4] FHWA Highway Traffic Noise, <a href="https://www.fhwa.dot.gov/Environment/noise/">https://www.fhwa.dot.gov/Environment/noise/</a>.

## **TNM 3.0 Noise Modeling Review Checklist**

### 6.0 Appendix: TMN 3.0 Noise Modeling Review Checklist

	Project Information					
Project						
Jurisdiction						
Project Number						
Project Plans and Date						
Traffic Data Source and Date						
	TNM Model Information					
TNM Project Name						
Year						
Alternative						
Filename/Location						
Review Information						
Reviewer						
Date Review Completed	Click here to enter a date.					

Input	Question	N/A	Yes?	Notes for Guide
Project Settings Section 2.2	Is the basic setup information complete?			
	Are receivers named?			Review plan view. Check receiver object details pane or receiver report. Can also export report.
	Are the numbers of dwelling units set correctly for each receiver?			Check receiver object details pane or receiver report. Can also export report.
	Are the receiver elevations correct?			Check 3D and section views. Check receiver object details pane or receiver report. Can also export report.
Receivers Section 2.5	Is the height above ground accurate for modeled upper-floor receivers?			Same as above
Section 2.5	Are enough receivers modeled to account for impacts and benefits?			Review plan view, 3D view, and use measurement tool.
	Are the NAC correct for the modeled receivers?			Check receiver object details pane or receiver report.
	Is the Noise Reduction Design Goal set per the noise policy?			Same as above
	Is the threshold for Substantial Increase set per the noise policy?			Same as above

Input	Question	N/A	Yes?	Notes for Guide
	Are roadway names assigned?			Check plan view, roadway object details pane, or roadway report. Can also export report.
	Are modeled roadway categories correct?			Check roadway object details pane or roadway report. Can also export report.
	Are the modeled pavement types correct?			Check roadway object details pane or roadway report. Can also export report.
Roadways	Are the roadway elevations correct?			Check 3D and section views. Check roadway object details pane or roadway report. Can also export report.
Section 2.6	Are the widths of roadway segments correct?			Same as above. Also Check 3D view and cut section views.
	Are traffic volumes and speeds assigned to all applicable roadway segments?			Check roadway object details pane or roadway report. Can also export report.
	Are traffic control devices modeled accurately (traffic lights, stop signs, on-ramps, toll booths)?			Check object details pane for flow control (Note: not shown in any view, or roadway/traffic reports); need to know how TNM handles this to give better guidance
	Are roadways on structure modeled accurately?			Select segment in plan view, find in object details pane
	Are building rows modeled?			Review plan view.
Building Rows Section 2.7	Are the building row elevations correct?			Check 3D and section views. Check building row object details pane or building row report. Can also export report.
	Do the building row heights and building percentages appear to be correct?			Same as above.

Input	Question	N/A	Yes?	Notes for Guide	
Terrain Lines Section 2.8	Does the model include significant terrain features?			Review plan, 3D and sections views.	
	Are the terrain line elevations correct?			Check 3D and section views. Check terrain line object details pane or building row report. Can also export report.	
Ground Zones Section 2.9	Does the model include significant ground zones?			Review plan view.	
	Are the ground zone types assigned correctly?			Check ground zone object details pane or ground zone report.	
Tree Zones Section 2.10	Does the model include tree zones?			Review plan view.	
	Are modeled tree zones likely to exist in the design year?			Check with project planners	
	Are tree zone names assigned?			Check plan view, tree zone object details pane, or tree zone report. Can also export report.	
	Do the tree zone elevations appear to be correct?			Check 3D and section views. Check tree zone object details pane or tree zone report. Can also export report.	
Barriers Section 2.11	Are barrier names assigned?			Check plan view, barrier object details pane, or barrier report. Can also export report.	
	Are barrier reflection surfaces assigned as appropriate?			Check barrier object details pane or barrier report. Need to check NRCs and pairings.	
	Are barriers on structure modeled accurately and are the shielded lists correct?			Check barrier object details pane or barrier report.	
	Fixed Height Barriers (Buildings, Parapet Walls, Median Barriers)				
	Are large buildings modeled?			Check plan and 3D views.	
	Are parapet walls, median barriers, etc. modeled per the noise policy?			Check plan and 3D views.	
	Are the barrier heights correct?			Check plan and 3D views. Check barrier object details pane or barrier report.	
	Proposed Barriers				

Input	Question	N/A	Yes?	Notes for Guide
	Are the proposed barriers modeled at the most acoustically effective location?			Check multiple section views.
	Are the barrier point names tied to stationing?			Review plan view.
	Are the barrier elevations correct?			Check 3D and section views. Check barrier object details pane or barrier report. Can also export report.
	Are the barrier heights, perturbation increment, and number of perturbations assigned in accordance with the noise policy?			Check barrier object details pane or barrier report. Can also export report.