Report No. UT-18.10

SPLIQ USER'S MANUAL

VERSION 1.41

Prepared For:

Utah Department of Transportation Research and Innovation Division

Submitted By:

Brigham Young University Department of Civil and Environmental Engineering

Authored By:

Kevin W. Franke Lucy Astorga Braden Error

September 2018

1501 South 27

DISCLAIMER

The authors alone are responsible for the preparation and accuracy of the information, data, analysis, discussions, recommendations, and conclusions presented herein. The contents do not necessarily reflect the views, opinions, endorsements, or policies of the Utah Department of Transportation or the U.S. Department of Transportation. The Utah Department of Transportation makes no representation or warranty of any kind, and assumes no liability therefore.

ACKNOWLEDGMENTS

The authors acknowledge the Utah, Idaho, Montana, Alaska, South Carolina, Connecticut, and Oregon Departments of Transportation for funding this research for pooled fund study TPF-5(296). The views and opinions presented in this report represent those of its authors, and may not represent those of the state agencies funding this research.

TECHNICAL REPORT ABSTRACT

1. Report No. UT-18.10	2. Government Ad NA	ccession No.	3. Recipient's Catalo NA	g No.
4. Title and Subtitle	1111		5. Report Date	
SPLIQ USER'S MANUAL			September 2	018
VERSION 1.41			6. Performing Organ	
VERSION 1.41			NA	
7. Author(s)			8. Performing Organ	ization Report No.
Kevin W. Franke, Luc	y Astorga, Braden Error		NA	
9. Performing Organization Nam	ne and Address		10. Work Unit No.	
Brigham Young Unive	ersity		4206515D	
Department of Civil and	nd Environmental Engineeri	ing	11. Contract or Gran	t No
368 Clyde Building	-	-	148753	it No.
Provo-UT 84602-4009)		140755	
12. Sponsoring Agency Name an	nd Address		13. Type of Report &	& Period Covered
Utah Department of T			User's Manu	al, March 2014 – September
4501 South 2700 Wes	t		2018	
P.O. Box 148410			14. Sponsoring Ager	ncy Code
Salt Lake City, UT 84	114-8410		PIC No. UT	
15. Supplementary Notes				
	on with the Utah Departmen	t of Transportation a	nd the U.S. Departme	ent of Transportation, Federal
Highway Administration				
16. Abstract				
This user's manual in	cludes a step-by-step pi	rocess for using a	a spreadsheet tool	called SPLIQ to perform
simplified calculations for performance-based probabilistic earthquake hazard analysis while using Standard			lysis while using Standard	
Penetration Test (SPT) data from site soil borings. The simplified models provide estimates of liquefaction				
triggering, lateral spread displacements, post-liqu				
simplified models were developed and validated, as document				
				, Montana, South Carolina,
				ter maps, which are used
	Q tool, were developed	for these seven st	tates for the 475 , 1	1033, and 2475 year return
periods.				
17. Key Words		18. Distribution Stateme		23. Registrant's Seal
SPLIQ, Lateral Spread Displacements,		Not restricted. Ava	ilable through:	
Liquefaction Triggering, Post-Liquefaction		UDOT Research & Innov. Division NA		NA
Settlements, Seismic Slope Displacements,		4501 South 2700 V	Vest	
Performance-based Engineering Reference Maps,		P.O. Box 148410		
Simplified Models, Seismic Hazards		Salt Lake City, UT	84114-8410	
		www.udot.utah.gov	v/go/research	
19. Security Classification 20. Security Classification		21. No. of Pages	22. Price	
(of this report)	(of this page)			
_				
Unclassified	Unclassified	29	NA	

TABLE OF CONTENTS

1.0 DEVELOPMENT OF SPLIQ	11
1.1 Overview	11
1.2 Description of Tool Components	11
1.2.1 Inputs	11
1.2.2 Online Interactive Reference Parameter Database	13
1.2.3 Simplified Performance-based Liquefaction Triggering Tabs	14
1.2.4 Simplified Performance-based Post- Liquefaction Settlement Tabs	14
1.2.5 Simplified Performance-based Lateral Spread Displacement Tabs	14
1.2.6 Simplified Performance-based Seismic Slope Displacement Tabs	15
1.2.7 Final Summary Tab	15
1.2.8 References	15
2.0 SUGGESTED SIMPLIFIED PROCEDURE	16
2.1 Simplified Performance-based Liquefaction Triggering	16
2.2 Simplified Performance-based Post-Liquefaction Settlement	20
2.3 Simplified Performance-based Lateral Spread Displacement	22
2.4 Simplified Performance-based Seismic Slope Displacement	25

LIST OF TABLES

Table 2-1. Conversions between Return Period and Exceedance Probability for use in the USGS	
interactive deaggregations website.	.18

LIST OF FIGURES

Figure 1-1 Analysis Selections section on the Inputs tab.	
Figure 1-2 Soil profile input section.	12
Figure 1-3 Ground motion and reference input parameters.	13
Figure 2-1 Soil profile information.	17
Figure 2-2 Example final summary for liquefaction initiation and settlement.	20
Figure 2-3 Recommended ranges of parameters for lateral spread analysis	23
Figure 2-4 Example of Final Summary of Lateral Spread Displacement Analysis	24
Figure 2-5 Analysis Selections for Slope Displacement	25
Figure 2-6 Infinite Slope Conditions to calculate ky (Rathje and Saygili, 2009)	27
Figure 2-7 Example of Final Summary of Seismic Slope Displacement Analysis	

LIST OF TERMS

Liquefaction Triggering Terms

a_{max}	peak ground surface acceleration
CRR	cyclic resistance ratio
$CRR_{PL=50\%}$	median CRR (CRR corresponding to a probability of liquefaction of 50%)
CSR	cyclic stress ratio
CSR ^{ref}	uniform hazard estimate of CSR associated with the reference soil profile
CSR ^{site}	site-specific uniform hazard estimate of CSR
ΔCSR_{σ}	correction factor for vertical stress
ΔCSR_{Fpga}	correction factor for soil amplification
ΔCSR_{rd}	correction factor for shear stress reduction
ΔCSR_{MSF}	correction factor for magnitude scaling factor
$\Delta CSR_{K\sigma}$	correction factor for overburden pressure
ΔCSR	difference between CSR ^{site} and CSR ^{ref} values
FC	fines content (%)
FS_L	factor of safety against liquefaction triggering
FS_L^{site}	site-specific uniform hazard estimate of FS_L
F_{PGA}	soil amplification factor
K_{σ}	overburden correction factor (Idriss and Boulanger model)
K_{DR}	correction factor for age of sand deposits from Hayati and Andrus (2009)
MSF	magnitude scaling factor
M_w	mean moment magnitude
Ν	SPT blow count (uncorrected)
$(N_1)_{60}$	SPT resistance corrected to 60% efficiency and 1 atm pressure
$(N_1)_{60,cs}$	clean sand-equivalent SPT corrected to 60% efficiency and 1 atm pressure

N_{req}	SPT resistance required to resist or prevent liquefaction
N_{req}^{ref}	uniform hazard estimate of N_{req} associated with the reference soil profile
$N_{req}^{\ site}$	site-specific uniform hazard estimate of N_{req}
ΔN_L	difference between N_{site} and N_{req} values
P_a	atmospheric pressure (1 atm, 101.3 kPa, 0.2116 psf)
PGA	peak ground acceleration
P_L	probability of liquefaction
r_d	shear stress reduction coefficient
SPT	Standard Penetration Test
V _{s,12}	average shear wave velocity in upper 12 m (39.37 ft) of soil profile
Z	depth to middle of soil profile layer
γ	unit weight of soil (i.e. pcf, kN/m ³ , etc.)
$\sigma_{arepsilon}$	error term for either model + parametric uncertainty or parametric uncertainty
σ_T	error term for both model and parametric uncertainty
σ_v	total vertical stress in the soil
σ'_v	effective vertical stress in the soil
Λ_{FSL^*}	mean annual rate of not exceeding some given value of FS_L
λ_{Nreq^*}	mean annual rate of not exceeding some given value of N_{req}
$ au_{cyc}$	equivalent uniform cyclic shear stress
Φ	standard normal cumulative distribution function

Lateral Spread Displacement Terms

D_H	median computed permanent lateral spread displacement (m)
R	closest horizontal distance from the site to the source (km)
М	earthquake moment magnitude

W	free-face ratio (%)
S	ground slope (%)
T_{15}	cumulative thickness (in upper 20 m) of all saturated soil layers with corrected SPT blowcounts (i.e., $(N_I)_{60}$) less than 15 blows/foot (m)
F_{15}	average fines content of the soil comprising T_{15} (%)
D50 ₁₅	average mean grain size of the soil comprising T_{15} (mm)
L	Loading Parameter
S	Site Parameter
D	transformed (e.g. log, ln, square root) lateral spread displacement
	uncertainty term (used in lateral spread displacement model)
$\left[\log D_{H}\right]^{site}$	logarithm of the lateral spread displacement adjusted for site-specific conditions
$\left[\log D_{H}\right]^{ref}$	logarithm of the lateral spread displacement corresponding to the reference site
ΔD_H	adjustment factor for lateral spread displacement
$D_{H}^{\ site}$	site-specific hazard-targeted lateral spread displacement

Post-Liquefaction Free-Field Settlement Terms

CRR	cyclic resistance ratio
CRR ^{ref}	cyclic resistance ratio associated with the reference soil profile
CRR ^{site}	cyclic resistance ratio for the site profile
CSR	cyclic stress ratio
CSR ^{ref}	uniform hazard estimate of CSR associated with the reference soil profile
CSR ^{site}	uniform hazard estimate of CSR associated with the site specific soil profile
CSR _{SS,20,1D,atm}	adjusted CSR to account for multi-directional shaking effects
CSR ^{site}	site-specific uniform hazard estimate of CSR
DF_i	depth factor for soil sub-layer
D_R	relative density

FC	fines content (%)
F_{PGA}	soil amplification factor
FS _{Liq}	factor of safety against liquefaction triggering
FS_L^{site}	site-specific uniform hazard estimate of FS_L
F_{α}	limiting factor of safety (used in Ishihara and Yoshimine model)
$F_{\alpha}^{\ ref}$	limiting factor of safety associated with reference soil profile
$F_{\alpha}^{\ site}$	limiting factor of safety associate with site soil profile
K_{md}	multidirectional correction factor for unidirectional applied loading
K_{Mw}	magnitude correction factor
K_{σ}	non-linear increase in cyclic resistance correction factor
min(.)	use minimum value inside parentheses mathematical operator
M_w	mean moment magnitude
Ν	SPT blow count (uncorrected)
$(N_1)_{60}$	SPT resistance corrected to 60% efficiency and 1 atm pressure
$(N_1)_{60,cs}$	clean sand-equivalent SPT corrected to 60% efficiency and 1 atm pressure
N _{req}	SPT resistance required to resist or prevent liquefaction
N_{req}^{ref}	uniform hazard estimate of N_{req} associated with the reference soil profile
N_{req}^{site}	site-specific uniform hazard estimate of N_{req}
N _{site}	standard penetration test resistance of site profile layer
P_a	atmospheric pressure (1 atm, 101.3 kPa, 0.2116 psf)
PGA	peak ground acceleration
P_L	probability of liquefaction
Sprofile	estimated total settlement for soil profile using equivalent strain approach
SPT	Standard Penetration Test
t_i	thickness of soil sub-layer
V _{s,12}	average shear wave velocity in upper 12 m (39.37 ft) of soil profile
Zcr	maximum depth at which vertical strain can occur ($z_{cr} = 18 \text{ meters}$)
$\Delta \varepsilon$	site-specific adjustment factor

ε _v	vertical strain
$\epsilon_{v,calibrated}^{site}$	site-specific strain calibrated for model non-linearity
ϵ_v^{ref}	vertical strain for the reference soil profile
ϵ_v^{site}	site-specific vertical strain
ε _{v,eqv.}	equivalent vertical strain for entire soil profile
$\epsilon_{v,max}$	maximum limiting vertical strain for a soil layer
γ	unit weight of soil (e.g. pcf, kN/m ³ , etc.)
γ_{max}	maximum limiting shear strain
$\gamma_{ m min}$	minimum limiting shear strain
$\lambda_{\varepsilon,v,i}$	mean annual rate of exceeding vertical strain
$\mu_{ln\epsilon}$	mean value of the natural logarithm of vertical strain
$\sigma_{arepsilon}$	error term for either model + parametric uncertainty or parametric uncertainty
σ'_{vo}	effective vertical stress in the soil
Φ	standard normal cumulative distribution function
Φ^{-1}	inverse standard normal cumulative distribution function

Seismic Slope Displacement Terms

$\ln D$	natural logarithm of seismic slope displacement (cm)
k_y	yield acceleration (g)
PGA	peak ground acceleration (g)
М	earthquake moment magnitude (g)
$\sigma_{{\scriptscriptstyle ln}}$	standard deviation for the scalar model
$\lambda_{_D}$	mean annual rate of not exceeding a seismic slope displacement value
D	seismic slope displacement (cm)
GM_i	single ground motion parameter
T_s	initial fundamental period of the sliding mass (s)

f_a	soil amplification factor (from AASHTO 2012 Values of site factor table)
$\ln D^{^{site}}$	natural log of seismic slope displacement adjusted for the site-specific conditions
$\ln D^{ref}$	natural log of seismic slope displacement corresponding to the reference site
$\Delta \ln D$	adjustment factor for seismic slope displacement
k_{y}^{site}	yield acceleration adjusted for site-specific conditions (g)
PGA ^{site}	peak ground acceleration adjusted for site-specific conditions (g)
k_{y}^{ref}	yield acceleration for the corresponding to the reference site (g)
PGA ^{ref}	peak ground acceleration corresponding to the reference site (g)
f_a^{site}	soil amplification factor adjusted for site-specific conditions
$f_a^{\it ref}$	soil amplification factor corresponding to the reference site

ONLINE MAP DATABASE ACCESS INFORMATION (for use with SPLiq)

URL: <u>https://tethys.byu.edu/apps/lfhazard/map/</u>

1.0 DEVELOPMENT OF SPLIQ

1.1 Overview

This section explains the components of the simplified liquefaction assessment tool *SPLiq*, and provides some guidance for how the tool should be used. The simplified models used in *SPLiq* were developed and validated, as documented in UDOT Research Report No. UT-16.16 from the TPF-5(296) pooled fund study that was funded by the Alaska, Connecticut, Idaho, Montana, South Carolina, Oregon, and Utah Departments of Transportation. The current version of the *SPLiq* spreadsheet tool is available on the TPF-5(296) pooled fund study webpage and also from the Utah Department of Transportation (Research and Geotechnical Divisions) and Brigham Young University (Department of Civil and Environmental Engineering).

1.2 Description of Tool Components

<u>1.2.1 Inputs</u>

This section of the spreadsheet is the starting place of the analysis. Here, the user may select which analyses and options he or she would prefer (Figure 1-1) and enter the soil profile information (Figure 1-2), mapped reference values, and other parameters, which are necessary for the simplified performance-based procedure (Figure 1-3). The input cells are color coded to help the user understand what is needed for each hazard. Liquefaction triggering inputs are blue, Lateral Spread inputs are green, Strain inputs are red, and Seismic Slope Displacement inputs are purple. At the bottom of the sheet, there is a section for deterministic inputs if the user would like to consider a deterministic analysis as well.

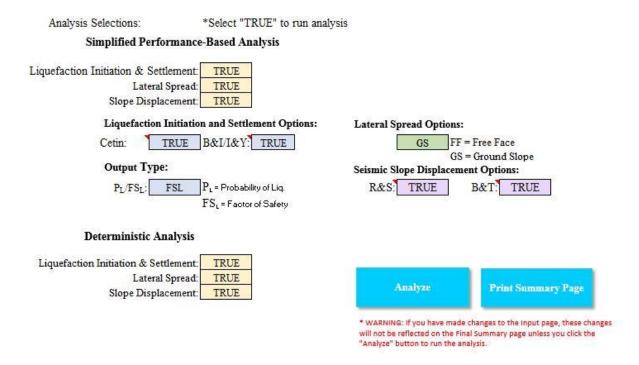


Figure 1-1 Analysis Selections section on the Inputs tab.

1.50 20 Standard SS (2 5.50 14 Non-Standard (1 10.50 12 Non-Standard (2 15.00 3 D&M SS (3.25 20.50 27 Custom Fa 25.50 22 Standard SS (2 30.50 16 Standard SS (2 35.50 13 Custom Fa 41.00 3 Custom Fa	3-in OD) 124.3 .5-in OD) 124.3 i-in OD) 124.3 actor 124.3 .in OD) 124.3	10.0 10.0 60.0 10.0 10.0 10.0	3.00 5.00 5.00 4.00 7.00	Granular Fill [SM]_Silty_sar [SM]_Silty_sar [CL]_Clay		Hammer Efficiency (%)
10.50 12 Non-Standard (2 15.00 3 D&M SS (3.25 20.50 27 Custom Fa 25.50 22 Standard SS (2 30.50 16 Standard SS (2 35.50 13 Custom Fa	.5-in OD) 124.3 i-in OD) 124.3 actor 124.3 i-in OD) 124.3	10.0 60.0 10.0	5.00 4.00 7.00	[SM]_Silty_sar [CL]_Clay	Yes	
15.00 3 D&M SS (3.25) 20.50 27 Custom Fa 25.50 22 Standard SS (2) 30.50 16 Standard SS (2) 35.50 13 Custom Fa	i-in OD) 124.3 actor 124.3 I-in OD) 124.3	60.0 10.0	4.00 7.00	[CL]_Clay		ter scenesare were
20.50 27 Custom Fa 25.50 22 Standard SS (2 30.50 16 Standard SS (2 35.50 13 Custom Fa	actor 124.3 -in OD) 124.3	10.0	7.00		No	Ser an and a series of the ser
25.50 22 Standard SS (2 30.50 16 Standard SS (2 35.50 13 Custom Fa	-in OD) 124.3					Borehole Diameter
30.50 16 Standard SS (2 35.50 13 Custom Fa		10.0		[SM]_Silty_sar	Yes	4.25 in
35.50 13 Custom Fa	(in OD) 124.2		3.00	[SM] Silty sar	Yes	
	-m OD) 124.5	10.0	7.00	[SM]_Silty_sar	Yes	Rod Stickup Length
41.00 3 Custom Fa	actor 124.3	10.0	3.00	[SM]_Silty_sar	Yes	5 ft
	actor 124.3	70.0	8.00	[CL]_Clay	No	
45.00 3 Custom Fa	actor 124.3	5.0	3.00	[SM]_Silty_sar	Yes	Sampler Type
51.50 18 Custom Fa	actor 124.3	5.0	7.00	[SM] Silty sar	Yes	L
57.00 5 Custom Fa	actor 124.3	5.0	4.00	[SM]_Silty_sar	Yes	L = Standard Split Spoon NL = Room for liners, but no 1 Convert SPT N Custom Fact

Figure 1-2 Soil profile input section.

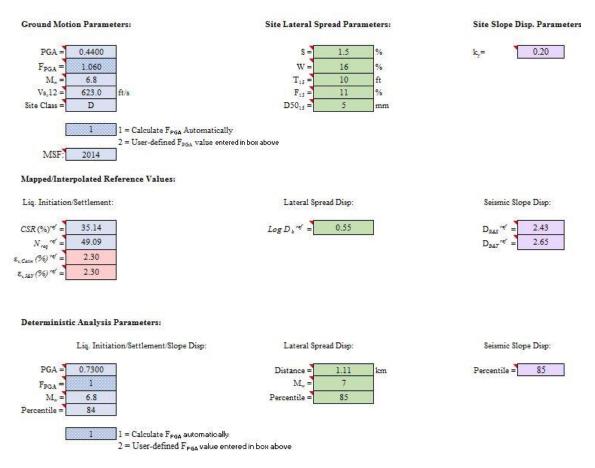


Figure 1-3 Ground motion and reference input parameters.

1.2.2 Online Interactive Reference Parameter Database

All liquefaction reference parameters necessary to use the simplified performance-based liquefaction hazard analysis models included in *SPLiq* can be obtained online for the seven participating states (i.e., Alaska, Connecticut, Idaho, Montana, Oregon, South Dakota, and Utah) at <u>https://tethys.byu.edu/apps/lfhazard/map/</u>. A blue button for automatically accessing this online database using an internet browser is included on the Inputs worksheet.

1.2.3 Simplified Performance-based Liquefaction Triggering Tabs

1.2.3.1 PB Liquefaction Initiation

This section of the spreadsheet shows the calculations for the simplified performancebased (PB) liquefaction initiation procedure. The Boulanger and Idriss (2012) model is simplified as derived in the Year 1 Quarter 1 report of this research. The Cetin et al. (2004) model is simplified as derived in the Mayfield et al. (2010) publication. This section also provides the calculations for correcting field SPT blow counts to values of $(N_1)_{60,cs}$. The user is not required to do anything on this page. This section is simply for reference if the engineer would like to see the calculation process.

1.2.3.2 Deterministic Liquefaction Initiation

This section of the spreadsheet calculates deterministic liquefaction initiation values. The formulas from the deterministic Idriss and Boulanger (2008) model and from the deterministic Cetin et al. (2004) model are used here. The user is not required to do anything on this page. This section is simply for reference if the engineer would like to see the calculation process.

1.2.4 Simplified Performance-based Post- Liquefaction Settlement Tabs

Simplified performance-based settlement calculations are performed on the *PB Settlement* tab. The *Det Settlement* tab contains calculations to perform a deterministic analysis of liquefaction settlement. Both the performance based and deterministic calculations are based on the Ishihara and Yoshimine (1992) and Cetin et al. (2009) settlement models. The derivation of the simplified model is presented in the Quarter 1 Year 2 report of this study. These sheets are available for review by the user but do not require any input or changes from the user. All calculations are done automatically when the "Analyze" button on the *Inputs* tab is selected

1.2.5 Simplified Performance-based Lateral Spread Displacement Tabs

This portion of the spreadsheet determines the simplified and deterministic lateral spread displacements based on the Youd et al (2002) empirical model and the simplified procedure developed in study TPF-5(296). The deterministic and simplified equations can be seen on this

page, and all lateral spread calculations are performed on this page. This sheet does not require any input from the user. The calculations are performed when the "Analyze" button on the input page is clicked. This section is to provide a reference to the engineer.

1.2.6 Simplified Performance-based Seismic Slope Displacement Tabs

This section of the spreadsheet computes the simplified and deterministic seismic slope displacements based on the Rathje and Saygili (2009) and the Bray and Travasarou (2007) models. The derivation of the simplified model is explained in Quarter 1 Year 2 report. This sheet is to provide the user information about how the displacements are being computed, but do not require any input or changes from the user. When the user clicks the "Analyze" button in the input page all calculations will be done automatically.

1.2.7 Final Summary Tab

This section shows the final results of the analyses chosen on the *Inputs* tab. The format of this section is already set up for easy printing. The headers of each page are associated with the project information entered on the *Inputs* tab. The first page provides a summary of inputs from the *Inputs* tab to facilitate easy checking of the inputs. The following pages show the results of the analyses. To print only the pages with the user-specified analyses, return to the *Inputs* tab and click the "Print Final Summary" button. The print preview window will appear and show only the user-specified analyses.

1.2.8 References

This tab provides references for the models used in this spreadsheet and further guidance for using this spreadsheet.

2.0 SUGGESTED SIMPLIFIED PROCEDURE

The following sections describe the suggested simplified procedure for assessing liquefaction triggering hazard, lateral spread displacement, post-liquefaction settlement, and seismic slope displacement.

2.1 Simplified Performance-based Liquefaction Triggering

- 1) Select an appropriate return period (T_R) for your project (this may depend on the intended use of the building, code requirements, etc.).
- 2) Retrieve the reference liquefaction loading value (i.e. N_{req}^{ref} or *CSR*%) from the maps or the interactive map database with the desired return period and model (i.e. Cetin et al, 2004 or Boulanger and Idriss, 2012). Note that provided N_{req}^{ref} maps are based on the Cetin et al. model and *CSR*% maps are based on the Boulanger and Idriss model.
- 3) Enter the required soil profile information into the *Inputs* tab (See Figure 2-1). Required values include depth to center of the sublayer, field SPT blowcount, unit weight (γ), fines content in percent, and thickness of each sublayer. An optional parameter is K_{DR} , a correction factor for age of sand deposits from Hayati and Andrus (2009). This value is not required, but may be used to increase the CRR of particular soil layers. Enter the hammer information, which is used for (N_1)_{60,cs} corrections.
 - a. Soil profile information can be entered in either SI or English customary units. Select the desired option by clicking the associated toggle above the soil profile table. Make sure that the values you enter for the soil profile are in the correct units.
 - b. Even though the zone of interest to the user may not include sublayers near the ground surface, all sublayers above the zone of interest must be included in the inputs tab so that the effective stress calculations will work properly. In other words, begin at the ground surface and include all sublayers down to the end of the zone of interest. Note: the maximum number of sublayers is 20.
 - c. At each depth, a Sampler Type can be chosen using a drop down menu. The sampler dimensions can be entered on the right for Hammer Efficiency (%), Borehole Diameter, Rod Stickup Length, and Sampler Type. If Custom Factor

is chosen for Sampler Type, the user can enter their own custom conversion factor.

d. The user can also enter the water level at time of drilling and the design water level (i.e. water level at time of earthquake). $(N_1)_{60,cs}$ is calculated from the ground water at time of drilling—all other calculations are performed using the design ground water depth.

		Level at Time of Drilling = Design Water Table Depth =	5	Probabili ft ft	ty of Exceedance: 2	2% in 50	yrs		. 2.1
epth (ft)	N (bpf)	Sampler Type	γ (lb/ft^3)	Fines (%)	Thickness (ft)	K _{dr}	Soil Type	Susceptible?	
1.50	20	Standard SS (2-in OD)	124.3	10.0	3.00		Granular Fill	Yes	Hammer Efficiency (%
5.50	14	Non-Standard (3-in OD)	124.3	10.0	5.00		[SM]_Silty_san	Yes	77
10.50	12	Non-Standard (2.5-in OD)	124.3	10.0	5.00		[SM]_Silty_san	Yes	
15.00	3	D&M \$\$ (3.25-in OD)	124.3	60.0	4.00		[CL]_Clay	No	Borehole Diameter
20.50	27	Custom Factor	124.3	10.0	7.00		[SM]_Silty_san	Yes	4.25 in
25.50	22	Standard SS (2-in OD)	124.3	10.0	3.00		[SM]_Silty_san	Yes	100
30.50	16	Standard SS (2-in OD)	124.3	10.0	7.00		[SM]_Silty_san	Yes	Rod Stickup Length
35.50	13	Custom Factor	124.3	10.0	3.00		[SM]_Silty_san	Yes	5 ft
41.00	3	Custom Factor	124.3	70.0	8.00		[CL]_Clay	No	
45.00	3	Custom Factor	124.3	5.0	3.00		[SM]_Silty_san	Yes	Sampler Type
51.50	18	Custom Factor	124.3	5.0	7.00		[SM]_Silty_san	Yes	L
57.00	5	Custom Factor	124.3	5.0	4.00		[SM]_Silty_san	Yes	L = Standard Split Spoor NL = Room for liners, but no l Convert SPT N Custom Fac 0.55

Figure 2-1 Soil profile information.

- 4) On the *Inputs* tab under "Analysis Selections" (See Figure 1-1), select the desired models and analyses. If the user wishes to use a deterministic analysis as an upper-bound to the performance-based results, the user should select the appropriate deterministic checkbox.
- 5) On the *Inputs* tab, enter liquefaction triggering parameters to be used in the simplified performance-based correction factors (derived in the Year 1 Quarter 1 report). The calculations will be performed in the spreadsheet automatically, but a few parameters must be provided by the user:
 - a. *PGA*: Peak Ground Acceleration should be retrieved from the USGS Interactive Deaggregation website

(https://earthquake.usgs.gov/hazards/interactive/) at the return period specified

in step 1. Note that the website uses exceedance probabilities instead of return periods. Use Table 2-1 to convert return periods to exceedance probabilities.

	Exceedance				
Return Period	Percent	Years			
475	10 (15)	50 (75)			
1,039 (1,033)	2 (7)	21 (75)			
2,475	2 (3)	50 (75)			

 Table 2-1. Conversions between Return Period and Exceedance Probability

 for use in the USGS interactive deaggregations website.

After entering the latitude and longitude of the site, exceedance probability, Spectral Period of 0.0 seconds, and $V_{s,30}$ of 760 m/s, retrieve the *PGA* from the output report. This value is necessary for estimating the F_{pga} . An example of where this number is located in the output report is provided in the *References* tab of the spreadsheet.

- b. F_{pga} : If the user checks the "Calculate F_{pga} automatically" checkbox, the spreadsheet will calculate F_{pga} according to the 2012 AASHTO code. However, this cannot be done if the Site Class is F (see notes about Site Class below), and therefore, the user must specify an F_{pga} value based on a site response analysis.
- c. M_w : The mean moment magnitude (M_w) is used to calculate the MSF correction factor as discussed in the Year 1 Quarter 1 report. The value for M_w is found in the same output report created to find the *PGA* value. An example of where this number is located in the output report is provided in the *References* tab of the spreadsheet.
- d. $V_{s,12}$: The shear wave velocity in the upper 12m (40 ft) is only required when using the Cetin et al (2004) model. For further guidance in calculating this value, see the *References* tab of the spreadsheet.
- e. Site Class: The site class is necessary for calculating the F_{pga} . Site class is determined based on soil type and soil properties. See the *References* tab of the spreadsheet for further help in determining site class.

- 6) On the *Inputs* tab under "Mapped Reference Values", enter the mapped values retrieved as part of step 2. At least one of the two parameters $(CSR(\%)^{ref} \text{ or } N_{req}^{ref})$ is necessary for analysis, but be aware of which model each of these parameters is associated with (see step 2). Also report the return period associated with the chosen map (this value will not be used in any calculations, but will be displayed on the final summary page for reference).
- 7) If the user wishes to use a deterministic analysis as an upper-bound to the performance-based results, the user should enter the deterministic values of *PGA*, M_w , and percentile of the *PGA* to be considered. This percentile value is not used in any calculations, but will be displayed on the final summary page for reference. The user must also specify a site class for the soil or provide a user-defined value for F_{pga} .
 - a. Deterministic values of PGA and M_w should be assessed by an experienced individual with proper training in deterministic seismic hazard analysis (DSHA).
 - b. It is suggested (as explained previously in this report) that a deterministic analysis should be considered when the engineer suspects that the project could benefit from a deterministic cap. In areas of low seismicity, this is likely unnecessary.
- 8) Several dropdown lists are displayed near the top of the *Inputs* tab (under the *Simplified Performance-Based* Analysis section) which allow the user to select which analyses (liquefaction initiation, settlement, lateral spread, or seismic slope stability), models (Cetin et al or Boulanger and Idriss), and options (P_L or FS_L) the user would like to consider. Select the desired analyses, models, and options before proceeding to the next step.
- Once everything is correctly entered into the *Inputs* tab, click "Analyze". The calculations will be displayed on the *PB Liquefaction Initiation* and *Det. Liquefaction Initiation* tabs.
- 10) The *Final Summary* tab displays plots, tables and a summary of inputs in a printable format. The headers of these pages will reflect information such as company name, project name/number, date, etc. entered at the top of the *Inputs* tab. An example final summary output is seen in Figure 2-2.

Company:	G	EO Compar	ıy	Project:	Trial Run
Drawn by:	B. Error	Checked:	L. Astorga	Location:	Salt Lake City, UT
Date:	3/18/2016	Date:		Project #:	AB-123-4567

Cumulative $(N_1)_{60,cs}$ Settlement [cm] CSR FS_L 0.0 2.0 4.0 0.0 20.0 40.0 10 40 2.0 30 0 0.5 1 0.0 ĽΔ 2.0 18888j 4.0 6.0 8.0 Η 10.0 Debth D 8988888 14.0 16.0 Ř 18.0 20.0 Nsite (I&B) CRR(I&B) FSL(I&B) - S(I&Y) Nreq(I&B) Nsite(Cet) CSR(I&B) Δ FSL(Cet) CRR(Cet) - S(Cet) FSL = 1Δ Nreq (Cet) Δ CSR(Cet) Idriss and Boulanger (2008, 2012); Ishihara & Yoshimine (1992) Cetin et al. (2004, 2009) N_{req}^{site} site $(N_1)_{60,cs}$ $(N_1)_{60,cs}$ Depth (m) CSR^{site} FS_L ∑S [cm] N_{req} CSR^{site} FS_L ∑S [cm] 0.50 21.23 22.48 0.2740 0.922 19.67 20.26 18.79 0.4738 1.112 24.90 1.50 17.21 24.33 0.3131 19.09 0.640 16.32 22.88 0.4701 0.622 24.21 2.50 16.86 24.84 0.3260 0.603 15.69 15.76 24.68 0.4650 0.524 20.77 3.50 13.29 25.26 0.3375 0.480 12.30 12.28 25.77 0.4584 0.376 16.93 4.50 14.70 25.31 0.3389 0.516 7.92 15.10 26.47 0.4497 0.439 12.00 5.50 16.08 25.31 0.3389 0.556 4.30 15.60 26.89 0.4386 0.441 8.19 23.02 1.33 23.96 27.09 6.50 25.13 0.3337 0.853 0.4250 0.796 4.73 7 50 22.80 25.14 0 2240 0.042 0 77 24.24 27.11 0 4000 0.010 2 20

Liquefaction Initiation and Settlement Simplified Performance-based Results:

Figure 2-2 Example final summary for liquefaction initiation and settlement.

2.2 Simplified Performance-based Post-Liquefaction Settlement

- 1) All input data and model options are entered and changed on the *Inputs* tab of the simplified tool (Figure 1-1 through Figure 1-3).
- 2) Enter the latitude, longitude and select the appropriate return period located at the top of the *Inputs* tab. Options available to select are: 475, 1033, and 2475 year return periods.
- Enter the required soil profile information in the appropriate cells. Please note that the simplified tool only allows for 20 soil sub-layers; therefore, divide or combine the soil profile properties accordingly (Figure 1-2).

- 4) In the "Analysis Selections:" section of the *Inputs* tab, choose the liquefaction hazard analysis to be run (Figure 1-1).
 - a. The "Cetin" settlement analysis cannot be run without also performing the "Cetin" liquefaction initiation model; likewise, the "I&Y" (Ishihara and Yoshimine) settlement model cannot be run without also performing the "B&I" (Boulanger and Idriss) initiation procedure.
 - b. You may also choose to run a deterministic liquefaction initiation/ settlement analysis in the "Analysis Selections:" section.
- 5) Enter the required settlement parameters on the "Inputs" tab (Figure 1-3):
 - a. *PGA*: Peak Ground Acceleration should be retrieved from the USGS Interactive Deaggregation website (https://earthquake.usgs.gov/hazards/interactive/) at the return period specified in step 1. Note that the website uses exceedance probabilities instead of return periods. Use Table 2-1 Table 2-1to convert return periods to exceedance probabilities.

After entering the latitude and longitude of the site, exceedance probability, Spectral Period of 0.0 seconds, and $V_{s,30}$ of 760 m/s, retrieve the *PGA* from the output report. This value is necessary for estimating the F_{pga} . An example of where this number is located in the output report is provided in the *References* tab of the spreadsheet.

- b. F_{pga} : If the user chooses to "Calculate F_{pga} automatically" by inputting "1" into the corresponding cell, the spreadsheet will calculate F_{pga} according to the 2012 AASHTO code. However, this cannot be done if the Site Class is F (see notes about Site Class below), and therefore, the user must specify an F_{pga} value based on a site response analysis.
- c. M_w : The mean moment magnitude (M_w) is used to calculate the MSF correction factor as discussed in the Year 1 Quarter 1 report. The value for M_w is found in the same output report created to find the *PGA* value. An example of where this number is located in the output report is provided in the *References* tab of the spreadsheet.

- d. $V_{s,12}$: The shear wave velocity in the upper 12m (40 ft) is only required when using the Cetin et al (2004) model for liquefaction initiation calculations only. If the user is just running the seismic slope displacement analysis he or she does not need to worry about the value that is entered in this box.
- e. Site Class: The site class is necessary for calculating the F_{pga} . Site class is determined based on soil type and soil properties. See the *References* tab of the spreadsheet for further help in determining site class.
- 6) Enter the applicable mapped reference values for *CSR* (%)^{*ref*}, N_{req}^{ref} , $\varepsilon_{v,Cetin}$ (%)*ref*, $\varepsilon_{v,I\&Y}$ (%)^{*ref*} obtained from the appropriate liquefaction hazard map (both model and return period).
- The user can also enter in a PGA, F_{PGA}, M_W, and Percentile in the corresponding cells to perform a deterministic analysis.
- 8) Once everything is correctly entered into the *Inputs* tab, click "Analyze". The calculations will be displayed on the *Final Summary* tab.
- 9) The *Final Summary* tab displays plots, tables and a summary of inputs in a printable format. The headers of these pages will reflect information such as company name, project name/number, date, etc. entered at the top of the *Inputs* tab. An example final summary output is seen in Figure 2-2.

2.3 Simplified Performance-based Lateral Spread Displacement

- 1) Select an appropriate return period (T_R) for your project (this may depend on the intended use of the building, code requirements, etc.).
- 2) Retrieve the logged reference lateral spread value (D_H^{ref}) from the map or the interactive map database with the desired return period.
- 3) Enter the required soil profile information into the *Inputs* tab. Required values include T_{15} (cumulative thickness of sand or gravel layers with SPT blow counts less than 15), W or S (which are terms based on site geometry), D_{50} (the mean grain size of the T_{15} layers), and F_{15} (the fines content of the T_{15} layers). Specific bounds for these parameters are clearly presented in the *References* Tab. An example of the information provided can be seen in Figure 2-3.

- a. The user must choose whether the analysis is for the Free Face or Ground Slope conditions.
- b. Soil profile information can be entered in either SI or English customary units. Select the desired option by clicking the associated toggle above the soil profile table.


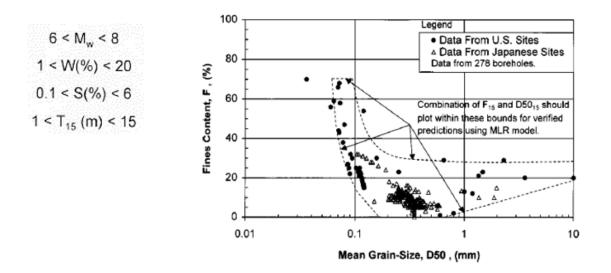


Figure 2-3 Recommended ranges of parameters for lateral spread analysis.

- 4) On the *Inputs* tab under "Analysis Selections", select the desired models and analyses (See Figure 1-1). If the user wishes to use a deterministic analysis as an upper-bound to the performance-based results, the user should select the appropriate deterministic checkbox.
- 5) On the *Inputs* tab under "Mapped Reference Values", enter the mapped values retrieved as part of step 2. Also report the return period associated with the chosen.
- 6) If the user wishes to use a deterministic analysis as an upper-bound to the performance-based results, the user should enter the deterministic values of M_w (moment magnitude of fault), *R* (source-to-site distance), and percentile of the M_w to be considered. This percentile value is required for the deterministic calculations.
 - a. Deterministic values of M_w and R should be assessed by an experienced individual with proper training in deterministic seismic hazard analysis (DSHA).

- b. It is suggested (as explained previously in this report) that a deterministic analysis should be considered when the engineer suspects that the project could benefit from a deterministic cap. In areas of low seismicity, this is likely unnecessary.
- 7) Several dropdown menus are displayed near the top of the *Inputs* tab which allow the user to select which analyses (liquefaction initiation, settlement, lateral spread, or seismic slope stability), models (Cetin et al or Boulanger and Idriss), and options (P_L or FS_L) the user would like to consider. Select the desired analyses, models, and options before proceeding to the next step.
- 8) Once everything is correctly entered into the *Inputs* tab, click "Analyze". The calculations will be displayed on the *Lateral Spread* tab.
- 9) The *Final Summary* tab displays plots, tables and a summary of inputs in a printable format. The headers of these pages will reflect information such as company name, project name/number, date, etc. entered at the top of the *Inputs* tab. An example of the lateral spread results section is shown below.

Summary of Inputs for Lateral Spread Analysis:

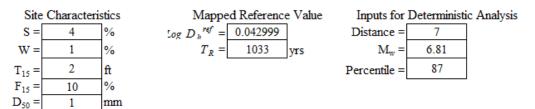

Lateral Spread Displacement Results:

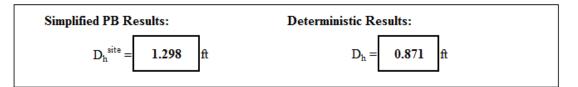


Figure 2-4 Example of Final Summary of Lateral Spread Displacement Analysis

2.4 Simplified Performance-based Seismic Slope Displacement

- 1) Select an appropriate return period (T_R) for your project (this may depend on the intended use of the building, code requirements, etc.).
- 2) Open the simplified performance-based liquefaction hazard assessment tool (provided as part of this report). Under "Analysis Selections" choose the analysis to perform.

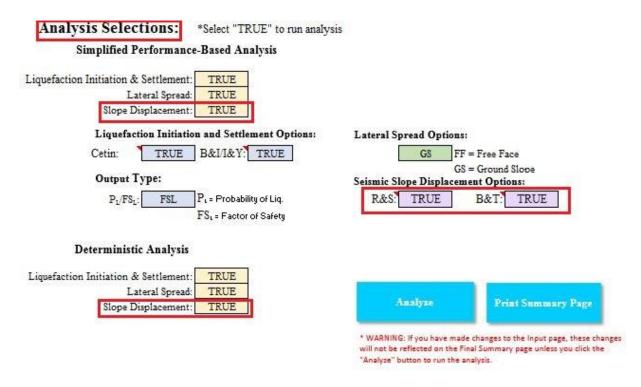


Figure 2-5 Analysis Selections for Slope Displacement

- 3) Enter the required site slope displacement parameters on the *Inputs* tab. Some of the parameters will be the same as those you will enter for site liquefaction analysis in which case the values need to be filled just once.
 - a. PGA: Peak Ground Acceleration should be retrieved from the USGS Interactive Deaggregation Website (https://earthquake.usgs.gov/hazards/interactive/) at the return period specified in step 1. Note that the website uses exceedance probabilities instead of return periods. Use Table 2-1 to convert return periods to exceedance probabilities.

After entering the latitude and longitude of the site, exceedance probability, Spectral Period of 0.0 seconds, and $V_{s,30}$ of 760 m/s, retrieve the *PGA* from the output report. This value is necessary for estimating the F_{pga} . An example of where this number is located in the output report is provided in the *References* tab of the spreadsheet.

- b. F_{pga} : If the user checks the "Calculate F_{pga} automatically" checkbox, the spreadsheet will calculate F_{pga} according to the 2012 AASHTO code. However, this cannot be done if the Site Class is F (see notes about Site Class below), and therefore, the user must specify an F_{pga} value based on a site response analysis.
- c. M_w : The mean moment magnitude (M_w) is used to calculate the MSF correction factor as discussed in the Year 1 Quarter 1 report. The value for M_w is found in the same output report created to find the *PGA* value. An example of where this number is located in the output report is provided in the *References* tab of the spreadsheet.
- d. $V_{s,12}$: The shear wave velocity in the upper 12m (40 ft) is only required when using the Cetin et al (2004) model for liquefaction initiation calculations only. If the user is just running the seismic slope displacement analysis he or she does not need to worry about the value that is entered in this box.
- e. Site Class: The site class is necessary for calculating the F_{pga} . Site class is determined based on soil type and soil properties. See the *References* tab of the spreadsheet for further help in determining site class.
- f. k_y: The yield acceleration represents the horizontal acceleration (in units of g) that results in a factor of safety of 1.0 which initiates sliding in the slope. This value is necessary for computation of seismic slope displacements for both Rathje & Saygili (2009), and Bray & Travasarou (2007) models. See the *References* tab and Figure 2-6 for help in determining k_y.

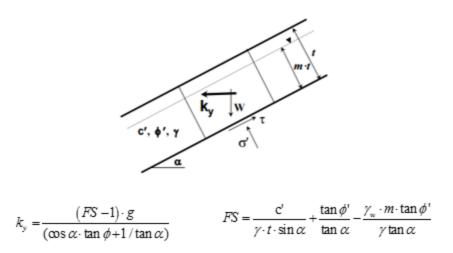



Figure 2-6 Infinite Slope Conditions to calculate ky (Rathje and Saygili, 2009).

- 4) Retrieve the logged reference seismic slope displacement value (D^{ref}) for both the Rathje & Saygili (2009) and Bray & Travasarou (2007) models from the map with the desired return period or use the interactive map database.
- 5) If the user wishes to use a deterministic analysis as an upper-bound to the performance-based results, the user should enter the deterministic values of *PGA*, M_w , and percentile of the *PGA* to be considered. This percentile value is not used in any calculations, but will be displayed on the final summary page for reference.
 - a. Deterministic values of PGA and M_w should be assessed by an experienced individual with proper training in deterministic seismic hazard analysis (DSHA).
 - b. It is suggested (as explained previously in this report) that a deterministic analysis should be considered when the engineer suspects that the project could benefit from a deterministic cap. In areas of low seismicity, this is likely unnecessary.
- 6) Several dropdown menus are displayed near the top of the *Inputs* tab which allow the user to select which analyses (liquefaction initiation, settlement, lateral spread, or seismic slope stability) and models (Rathje & Saygili or Bray & Travasarou), the user

would like to consider. Select the desired analyses, models, and options before proceeding to the next step.

- 7) Once everything is correctly entered into the *Inputs* tab, click "Analyze". The calculations will be displayed on the *Final Summary* tab.
- 8) The *Final Summary* tab displays plots, tables and a summary of inputs in a printable format. The headers of these pages will reflect information such as company name, project name/number, date, etc. entered at the top of the *Inputs* tab. An example of the seismic slope displacement analysis is shown below.

Summary of Inputs for Seismic Slope Displacement Analysis:

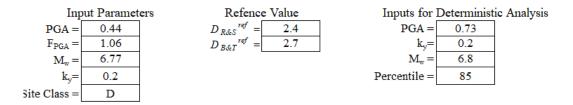

Seismic Slope Displacement Results:

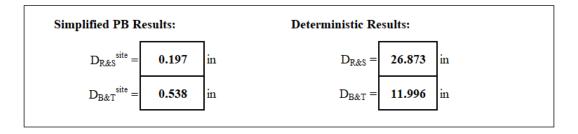


Figure 2-7 Example of Final Summary of Seismic Slope Displacement Analysis